



SYSTEM INTEGRATION AND REFERENCE GUIDE

IBM INTELLISTATION M-PRO (MODEL 6889)

Post Production Products

MediaComposer for Windows NT
Symphony
Xpress NT Deluxe
Xpress NT Elite

Avid Technology Systems Engineering

Avid Part Number: 0130-04268-01

Rev 15

June 3, 1999

Table of Contents

1. General Information.....	6
1.1 How To Use This Document	6
1.2 Updates to this Document	7
1.3 Where to Obtain More Information	7
1.4 Revision History.....	8
2. System Integration Checklist	11
3. IBM Intellistation M-Pro System Description	25
3.1 System Board Overview	25
3.2 Configured Peripherals.....	27
3.3 Chassis.....	27
3.4 Keyboard	28
3.5 Mouse.....	28
3.6 Graphics Cards and Monitors.....	28
3.7 IBM Intellistation Models and Options.....	29
4. BIOS	31
4.1 BIOS Revisions	31
4.2 BIOS Groups	32
4.3 System Summary	33
4.4 Product Data.....	33
4.5 Devices and I/O Ports	34
4.6 Start Options.....	35
4.7 Date and Time	35
4.8 System Security.....	36
4.9 Advanced Setup	36
4.10 ISA Legacy Resources.....	37
4.11 Power Management	37
4.12 Updating the System BIOS	38
5. Hardware Configuration.....	41
5.1 System Board Graphic	41
5.2 Switches and Jumpers	43
5.3 I/O Panel Connections	44
5.4 Central Processor.....	45
5.5 Memory.....	45
5.5.1 Identification of PC100 Compliant SDRAM DIMM.....	46
5.5.2 Memory Requirements for Avid NT Products	46
5.6 System Board Integrated Devices.....	46
5.6.1 Adaptec AIC-7895 SCSI Host Adapter Configuration.....	46
5.6.1.1 Adaptec Option ROM Configuration.....	47
5.6.1.2 Adaptec Option ROM Menus.....	47
5.6.2 Intel EtherExpress Pro100 Network Interface.....	49
5.6.3 Crystal Semiconductor 4235 Audio Chip	49
5.7 AGP Graphics.....	50
5.8 PCI Board Configuration	50
5.8.1 Avid MediaComposer or Symphony Board Configuration Chart	51
5.8.2 Avid Xpress NT Board Configuration Chart	52
5.9 Adaptec/JNI AHA-F940 Fibre Channel Controller.....	53
5.10 Adaptec AHA-3940 SCSI Host Adapter	54
5.10.1 Adaptec Option ROM Configuration	55
5.10.2 Adaptec Option ROM Menus	55
5.11 Avid Meridien Digital Media Board	57
5.12 Avid Meridien Display Controller (EDC)	58
5.13 Meridien 3D Effects Combination.....	59
5.14 Connecting the Meridien I/O Box	60
6. Windows NT Configuration	61

6.1	Windows NT Workstation 4.0	61
6.2	Windows NT Server.....	61
6.3	Windows NT Workstation Installation.....	61
6.4	Windows NT Service Packs	63
6.5	Post-Service Pack Fixes	64
6.6	Service Pack 4 Installation Procedure.....	64
6.6.1	Preparing to Install Service Pack 4	64
6.6.2	Installing Service Pack 4 from CD-ROM.....	65
6.6.3	Installing Service Pack 4 from a Download.....	66
6.6.4	Resolving Year 2000 Issues	67
6.6.5	Reapplying a Service Pack	68
6.6.6	Uninstalling a Service Pack.....	68
6.6.7	Copying SP4 to Disk	69
6.6.8	Re-installing Service Pack 3	69
6.7	General Windows NT Setup.....	70
6.7.1	Explorer View	70
6.7.2	Screen Savers.....	70
6.7.3	Fonts	70
6.7.4	Environment Variables	71
6.7.5	Applications Partition.....	71
6.7.6	User Account Guidelines.....	72
6.7.7	Windows NT Registry Modifications.....	73
6.7.7.1	KeyboardDataQueueSize	73
6.7.7.2	MouseDataQueueSize	73
6.7.7.3	CD Autorun.....	74
6.7.8	Serial Ports.....	74
6.7.9	Parallel Port.....	75
6.7.10	Dual Monitor Support	75
6.8	Windows NT Error Handling.....	76
6.8.1	DRWATSN32.LOG	76
6.8.2	NT Event Viewer Configuration.....	76
6.8.3	NT Crash Dump Recovery Configuration	77
6.9	Pagefile Configuration	77
6.10	Windows NT HAL Replacement.....	78
6.10.1	Determining the HAL Version.....	79
6.10.2	Replacing the HAL	80
6.11	Hardware Profiles	80
6.12	Changing the Registered Owner	82
7.	Windows NT Device Drivers	83
7.1	NT Device Drivers and Revisions Chart.....	83
7.2	MGACtrl Service.....	84
7.3	Adaptec SCSI Host Adapter.....	84
7.3.1	Adaptec SCSI Driver Revision Verification	85
7.3.2	Installing or Updating the Adaptec SCSI Device Driver	85
7.4	Adaptec Fibre Channel Adapter	86
7.4.1	Adaptec Fibre Channel Driver Revision Verification	86
7.4.2	Updating or Installing the Adaptec Fibre Channel Driver.....	86
7.5	Avid Meriden Digital Media Board Driver	87
7.6	Avid Edit Display Controller.....	88
7.6.1	Number Nine Display Device Driver	88
7.6.2	Avid Edit DMA Device Driver	89
7.7	Crystal CS4235 Audio Driver	90
7.7.1	Crystal CS4235 Audio Sound Driver Revision Verification.....	90
7.7.2	Installing or Updating the Crystal Audio Driver	90
7.7.3	Installing the MIDI Driver.....	91
7.8	Intel PIIX IDE Bus Master Drivers	93
7.8.1	IDE Bus Master Driver Revision Verification.....	93

7.8.2	Updating or Installing the IDE Bus Master Device Driver	93
7.9	Intel EtherExpress Pro100 Network Interface	94
7.9.1	Network Interface Driver Revision Verification.....	95
7.9.2	Updating or Installing the Network Interface Device Driver	95
7.10	Pinnacle 3D DVE Genie Driver	95
7.11	Sentinel Driver	96
7.11.1	Sentinel Driver Revision Verification	96
7.12	VTR Serial Driver.....	97
8.	Windows NT Networking	99
8.1	Networking DHCP	99
8.2	Networking and Final Integration.....	99
8.3	Computer Browser Service	100
9.	Windows NT Maintenance and Recovery	101
9.1	Windows NT Repair Disk	101
9.2	Using the Emergency Repair Disk	102
9.3	Windows NT Boot Diskette.....	103
9.4	Registry Backup	104
9.5	Saving the Disk Configuration	104
9.6	Removing Stripe Sets.....	105
10.	Peripheral Configuration	107
10.1	Disk Configuration Guidelines	107
10.2	Supported File Systems	108
10.3	Disk Striping	109
10.4	Partitioning Disk Drives	110
10.5	Formatting Disk Drives	111
10.6	Non Avid Storage	112
10.7	Network Drives	112
10.8	Removable Drives	113
10.9	Disk Fragmentation	113
10.10	Resolution Matrix	114
10.11	Keyboard and Mouse Extensions	115
11.	Diagnostics and Utilities	117
11.1	Vendor Utilities and Diagnostics.....	117
11.2	Avid Diagnostics	118
11.3	Avid Utilities	118
11.4	Third Party Utilities	119
12.	Troubleshooting.....	121
12.1	Media Board Driver Failure	121
12.2	Display Monitor Colors or Resolution Incorrect.....	121
12.3	Second Display Monitor Not Enabled.....	122
12.4	Edit DMA Ext Clock Error	122
12.5	MIDI Resource Failure	123
12.6	Application Key (Dongle) Does Not Function.....	124
13.	Reference Section.....	125
13.1	IBM Intellistation M-Pro Parts View	125
13.2	Environmental Specifications	127
13.3	Packaging.....	128

1. General Information

1.1 How To Use This Document

This document describes the recommended configuration and integration guidelines or restrictions for Avid NT products on an IBM Intellistation M-Pro (Model 6889). This guide also serves as a reference for common Windows NT procedures but is not intended as a replacement for any platform vendor published documentation, peripheral documentation, or Avid product specific documentation. The document describes the procedures necessary to produce a functional system. It is designed as a reference to answer the "How do I do that" questions that come with any step involved in configuring or maintaining a system.

While much of the information described in this document is procedural in nature, it is NOT necessarily in order of implementation. Please use the **System Integration Checklist** for the exact order of integration and reference the specific section headers for detail about the integration steps.

This document uses modular sections designed to accommodate maintenance. Each section covers a specific set of content, and the content of each section is not intended to be in any specific order. This allows support for multiple products and for different configuration techniques to be added or subtracted as needed.

Sections and Content

1. General Information – Provides an overview of the guide's purpose and revision history.
2. System Integration Checklist – Step-by-step system integration process.
3. System Description – Describes the features and components that comprise the vendor platform.
4. BIOS Configuration – Recommended system BIOS configuration.
5. Hardware System Configuration – Describes information relevant to hardware configuration only.
6. Windows NT Configuration – Describes all Windows NT setup requirements for maintenance and operation.
7. Windows NT Device Drivers - Describes Windows NT device driver requirements for all hardware.
8. Windows NT Networking – Describes common networking configuration requirements.
9. Windows NT Maintenance and Recovery – Describes common Windows NT maintenance tools and techniques.
10. Peripheral Configuration – Describes common peripheral setup, including storage requirements.

11. Diagnostics and Utilities – All utilities used to assist troubleshooting.
12. Troubleshooting – Common system configuration troubleshooting procedures.
13. Reference – Dumping ground for all miscellaneous information.

Do not use this document to integrate another vendor platform. While much of the content will be applicable to another platform there are specific steps which are not relevant to another system.

NT Directory Naming

Many directories are described in this document as **<systemroot>**. This is another way of describing the name of the directory where Windows NT is installed. This is necessary because there are no naming standards for the directory and it may differ among installations. Many vendors commonly standardize installations with directory names like **winnt** or **winnt40** but this is not guaranteed.

1.2 Updates to this Document

This document will be updated as new information becomes available. New revisions will render the previous document obsolete.

1.3 Where to Obtain More Information

- For more information on the IBM Intellistation M-Pro platform refer to:

IBM Corporation: www.pc.ibm.com

- Updated device drivers, technical information, or other related information is posted to Avid web sites:

Avid Technology: www.avid.com

- Web addresses for vendors mentioned in this document:

Adaptec:	www.adaptec.com
Crystal Semiconductor:	www.crystal.com
Diamond Multimedia	www.diamondmm.com
Executive Software:	www.execsoft.com
Intel Corporation:	www.intel.com
Iomega Corporation:	www.iomega.com
Microsoft Corporation:	www.microsoft.com
Miramar Systems:	www.miramarsys.com
Quantum Corporation:	www.quantum.com

Raxco Software: www.raxco.com
 Seagate Corporation: www.seagate.com
 Turtle Beach: www.tbeach.com

1.4 Revision History

Revision	Date	Comments	Author
15	03-Jun-1999	- Revision for Avid Release	Dan Powell
1.5	30-Apr-1999	- ESD warnings added to board installation - Rewrote Meridien 3D effects description - MGACtrl service disable procedure.	Dan Powell
1.4	12-Apr-1999	- More explanation in integration steps - Integration steps divided between Avid and Reseller - Sections moved around for better continuity - Platform vendor Windows NT installation procedure added - Additional detail on several procedures. - Automatic reboot removed from crash control. - Stripe set removal added - Service Pack 4 and Y2K installation procedures added. - Service Pack 3 and hotfixes removed.	Dan Powell
1.3	16-Feb-1999	- Edits based on comments from Manufacturing and Avid/Singapore Training - Minor re-ordering of integration steps. Integrator may delay some reboots. - Addition of supported driver matrix. - Driver verification procedures reference driver matrix for revision information.	Dan Powell
1.2	12-Jan-1999	- Edits to reflect BIOS changes	Dan Powell
1.1	19-Oct-1998	- Minor edits based on feedback from Symphony System Support training. - (Fibre driver rev, SCSI BIOS, Hal clarification)	Dan Powell
1.0	2-Sep-1998	- First Customer Ship revision. - Removed beta requirements updated driver and BIOS areas.	Dan Powell
002a-Beta	1-Jul-1998	- Removed MediaComposer NT references	Dan Powell
002-Beta	16-Jun-1998	- Corrections and revisions based on reviewer comments	Dan Powell
001-Beta	26-May-1998	- Initial Release for beta integration	Dan Powell

Symphony, and Xpress are trademarks of Avid Technology, Inc. All other trademarks contained herein are the property of their respective owners.

2. System Integration Checklist

Applicable Avid NT Products: *Symphony, Xpress NT, MediaComposer*

This checklist should be followed exactly as detailed to successfully integrate Avid NT products on the IBM Intellistation. Before starting system integration you will need:

- Blank 2.0MB High Density Double Side diskettes
- Tools such as a regular flat-blade screwdriver, 3/16 Nut driver, and anti-static protection.
- MIDI Cable
- Category 5 network Cable and port
- IBM Ready to Configure CD-ROM
- Windows NT Workstation Product License Identification

Note: For this document, revision (1.4) integration steps and responsibility are divided between Avid manufacturing and external reseller actions. Avid has defined where each integration action begins and ends to facilitate proper system configuration.

Integration Step	Avid Manufacturing Action Required
Read General Information Section	Read the General Information section to familiarize yourself with this document's purpose, conventions, and design. Reference section 1
Read System Description Section	Read the System Description section to familiarize yourself with the system platform. Reference sections 3.1 through 3.7
Inventory System	Inventory the system to insure all parts are present.
Remove system unit side panel	Remove left side panel from system unit by grasping and pulling the thumb hold, then sliding cover towards the front of the system unit.
Check connections and switches	Check all system board connections to insure shipment has not damaged or loosened cables. Check that the processor is secure and a terminator is present if required. Check system board switches for correct values. Reference sections 5.1 through 5.4

Integration Step	Avid Manufacturing Action Required
Connect Keyboard and Mouse	<p>Connect the keyboard to the keyboard port on the rear I/O connector panel. Connect the IBM PS2 mouse to the PS2 mouse port on the rear I/O connector panel.</p> <p>Reference section 5.3 for connector location.</p>
Connect Monitor to VGA connector	<p>Connect a single monitor to the AGP graphics card.</p> <p>Reference section 5.3</p>
Check and add memory if needed.	<p>Verify memory is secure and add additional DIMMs if required. Symphony and Xpress ship with different amounts of memory as standard configuration.</p> <p>Reference sections 5.5 through 5.5.2 for full instructions.</p>
Add MIDI Cable to system	<p>A MIDI/Game/Joystick cable may be installed to the port header on the system board to allow the use of automated MIDI fader peripherals. Refer to the <i>System Board Graphic</i> diagram in the Hardware Configuration section of this document for the header location.</p> <p>Reference section 5.6.3 for full instructions.</p>
Connect Power Cord	<p>Connect power cord to the system unit. System will power up for a brief interval and then shutdown.</p>
Power up system	<p>Power up the system and check that the IBM logo is visible on the display. If no screen information (blank monitor), correct the problem.</p>
Configure BIOS Parameters.	<p>Perform and verify all required BIOS changes. Press F1 to enter BIOS. The BIOS screens will appear after the system has completed a scan of the Adaptec 7895 device.</p> <p>Check the version of the BIOS matches one of the valid versions on the chart in section 4.1. DO NOT UPDATE THE BIOS. If the BIOS revision is not reflected on the chart in section 4.1, contact Avid Systems Engineering immediately.</p> <p>We recommend you DO NOT set BIOS parameters from a restoration diskette.</p> <p>Key parameters to configure are PCI Parity, Bus Mastering, Startup Sequence, Power Management</p> <p>Reference sections 4 through 4.11 for full instructions.</p>

Integration Step	Avid Manufacturing Action Required
<p>Configure Adaptec 7895 SCSI Parameters.</p>	<p>Configure the on-board Adaptec 7895 controller. Press “Ctrl A” to enter the Adaptec BIOS when displayed on the monitor.</p> <p>Key parameters to configure are Bus Bandwidth setting to 20MB/s for all devices on channels A and B.</p> <p>Reference sections 5.6.1 through 5.6.1.2 for full instructions.</p>
<p>Check Network Interface hardware configuration</p>	<p>Verify that system board SW1-6 switch is OFF. Verify that Ethernet Support is enabled in the BIOS Devices and I/O Ports and the Network device is enabled for bus mastering in the BIOS Advanced Setup.</p> <p>Reference sections 4.5, 4.9, 5.2 and 5.6.2 for full instructions.</p>
<p>Boot pre-installed version of Windows NT and complete installation.</p>	<p>This procedure assumes Windows NT Workstation is pre-installed on the system drive by the platform vendor and will require build completion. Completing the platform vendor installation is the most reliable method of achieving a successful Windows NT configuration on the system unit. Completing the platform vendor installation will automatically update the system to Windows NT Service Pack 4. Time to complete a pre-installed automated procedure is approximately fifteen minutes.</p> <p>Other acceptable methods to install Windows NT Workstation are:</p> <ol style="list-style-type: none"> 1. Manually, using the Windows NT Setup diskettes and Windows NT Distribution Media CD-ROM. 2. Rapid Deployment <p>Regardless of the method used to create the system disk, the following information is required by Avid Systems Engineering to complete the installation.</p> <ul style="list-style-type: none"> • Company Name and Organization: Name: Avid Technology Organization: Avid Technology • End User License product registration ID. • Computer Name: AvidTechnology • Administrator account password: No password assigned • Site network requirements are understood. Minimum network requirements defined by Avid Systems Engineering are: <ol style="list-style-type: none"> 1. Network adapter search for 82557 2. TCP/IP protocol only applied 3. DHCP configured <p>Reference section 6.3 for detailed instructions.</p>

Integration Step	Avid Manufacturing Action Required
Verify or Install Windows NT Service Pack 4	<p>Verify that Windows NT Service Pack 4 is installed. If not, installation of the service pack will be necessary.</p> <p>Detailed instructions and references are in sections 6 through 6.6.4</p>
Install Y2K compliant components	<p>Execute Y2Ksetup from the service pack 4 I386\Update directory and install Internet Explorer 4.01 and MDAC components.</p> <p>Reference section 6.6.2 through 6.6.4 for detailed instructions.</p>
Copy SP4 contents to System Disk	<p>If the system was originally supplied with Service Pack 3 on the system disk, delete the service pack 3 directory. If you installed Service Pack 4 from a CD-ROM, copy the \I386 directory from the Service Pack 4 CD-ROM to C:\SP4. Also copy the CD directories \Msie401 (for Microsoft Internet Explorer 4.01 Service Pack 1) and \Mdac (for Microsoft Data Access Components 2.0 Service Pack 1) to C:\SP4.</p> <p>If Service Pack 4 was applied via downloads, move the downloaded compressed images to C:\SP4.</p> <p>Reference section 6.6.7 for more instructions.</p>
Configure Windows NT Explorer View	<p>To assist installation and configuration procedures, set the Windows NT Explorer view to display all files, including hidden files. Use the Explorer View menu and tab to make the changes.</p> <p>Full instructions and references are in section 6.7.1</p>
Disable Screen Savers	<p>Screen savers must be disabled to avoid interference during processor intensive operations such as exports or long rendering sessions. Access the Display Control Panel Settings tab to make changes.</p> <p>Full instructions and references are in section 6.7.2</p>
Check the Temp directory and variable	<p>Most installations of Windows NT configure the system TEMP variable properly. However, this should be verified to avoid installation or application problems. Verify the TEMP directory is present on the system disk (C:) and the TEMP variable is present in the System section of the System Control Panel Environment page.</p> <p>Full instructions and references are in section 6.7.4</p>

Integration Step	Avid Manufacturing Action Required										
Format remaining system disk space and create an applications partition.	<p>If the system disk drive has unformatted space you must use the disk administrator to allocate this unused space as an additional primary partition. Quick format the new partition choosing NTFS for the file system</p> <p>When formatting is complete you must insure this partition is assigned drive letter D:. To do this you may need to move the CD-ROM to an unused letter other than D and assign drive letter D to the partition.</p> <p>Full instructions and references are in section 6.7.5</p>										
Create a “Users” Directory and Add the user account AvidTechnology	<p>Since the administration of individual user accounts is site specific, Avid and its resellers will configure the system with two NT administrative privileged accounts for consistency, demonstration, and troubleshooting. Create a “Users” directory on drive D. Use the NT User Manager</p> <table><tr><td><u>Account Name</u></td><td><u>Password</u></td><td><u>Privileges</u></td></tr><tr><td>Administrator</td><td>No password assigned</td><td>Administrator</td></tr><tr><td>AvidTechnology</td><td>No password assigned</td><td>Administrator</td></tr></table> <p>Full instructions and references are in section 6.7.6</p>	<u>Account Name</u>	<u>Password</u>	<u>Privileges</u>	Administrator	No password assigned	Administrator	AvidTechnology	No password assigned	Administrator	
<u>Account Name</u>	<u>Password</u>	<u>Privileges</u>									
Administrator	No password assigned	Administrator									
AvidTechnology	No password assigned	Administrator									
Perform NT Registry Modifications	<p>Use Regedt32 or Regedit to make modifications to the NT Registry.</p> <p>HKLM\SYSTEM\CurrentControlSet\Services\Cdrom\Parameters \AutoRun to 0</p> <p>HKLM\SYSTEM\CurrentControlSet\Services\Kybd\Parameters \KeyboardDataQueueSize to 128H</p> <p>HKLM\SYSTEM\CurrentControlSet\Services\Mousclass\Parameters \MouseDataQueueSize to 128H</p> <p>Full instructions and references are in sections 6.7.7 through 6.7.7.3</p>										
Configure Serial Ports	<p>Configure serial ports COM1 and COM2 using the Ports Control Panel. Settings for each ports are:</p> <table><tr><td>Baud Rate :</td><td>38400</td></tr><tr><td>Data Bits :</td><td>8</td></tr><tr><td>Stop Bits :</td><td>1</td></tr><tr><td>Parity :</td><td>None</td></tr><tr><td>Flow Control :</td><td>None</td></tr></table> <p>Full instructions and references are in section 6.7.8</p>	Baud Rate :	38400	Data Bits :	8	Stop Bits :	1	Parity :	None	Flow Control :	None
Baud Rate :	38400										
Data Bits :	8										
Stop Bits :	1										
Parity :	None										
Flow Control :	None										
Configure Windows NT Event Viewer	<p>Set the NT event logs System, Application, and Security to preserve entries instead of overwriting.</p> <p>Full instructions and references are in section 6.14.2</p>										

Integration Step	Avid Manufacturing Action Required
Configure Windows NT Crash Dump Recovery	<p>Configure the System Control Panel Startup/Shutdown Recovery options to preserve a crash dump file. Do not restart when asked. Changes to the file are effective after the next system restart.</p> <p>Full instructions and references are in section 6.14.3</p>
Configure the Pagefile	<p>Configure a 300MB pagefile on the system partition (C:). Set the minimum and maximum size to 300MB using the System Control Panel Performance tab. Do not restart when asked. Changes to the page file are effective after the next system restart.</p> <p>Full instructions and references are in section 6.15</p>
Replace the NT HAL	<p>To facilitate MIDI operations with the Crystal CS4235 audio chip and service pack 4, the NT APIC HAL must be replaced.</p> <p>Reference sections 6.16 through 6.16.2 for more instructions.</p>
Verify or install Adaptec SCSI device driver	<p>The Adaptec SCSI device driver is installed and started as part of the NT pre-load build by IBM. Verify the driver AIC78XX.SYS is at the recommended revision level reflected on the driver chart in section 7.1.</p> <p>Full instructions and references are in section 7.3 through 7.3.2</p>
Verify or install network interface device driver	<p>The EtherExpress Pro100B is based on the Intel 82558 chip. This interface is a replacement for the Intel 82557. It is not the same as the Intel 82557-based 10/100 Ethernet PCI interface available as an option during Windows NT 4.0 network software installation. If the interface is improperly specified during default Windows NT installation it will NOT function although the drivers will display no indication of error during installation of networking.</p> <p>Verify the device driver E100BNT.SYS reflects the recommended revision level reflected on the driver chart in section 7.1.</p>
Verify or install Crystal Audio device driver	<p>The Crystal Audio CS4235 device driver must be enabled on shipping systems. Use the Multimedia Control Panel to check the properties of the Audio Device.</p> <p>Full instructions and references are in section 7.7.1</p>
Install MIDI Drivers	<p>Configure the MIDI device driver resources. Remember the MIDI driver resources require IRQ 9 to function successfully. Restart system as part of the installation procedure.</p> <p>Reference section 7.7.3 for full instructions.</p>
Disable Computer Browser service	<p>Use the Services Control Panel to disable the Computer Browser Service.</p> <p>Full instructions and references are in section 8.3</p>

Integration Step	Avid Manufacturing Action Required
Install Adaptec EZ-SCSI kit.	Install EZ SCSI kit from IBM Ready to Configure kit. Do not restart the system.
Create Windows NT Factory Default Emergency Repair Disk.	Create Windows NT Factory Default Emergency Repair Disk. Open a command prompt and type rdisk /s to create the repair disk. Reference section 9.1 for instructions.
Power Down System and prepare system for shipment	- END AVID MANUFACTURING -

Integration Step	Reseller Action Required
Read General Information Section	Read the General Information section to familiarize yourself with this document's purpose, conventions, and design. Reference section 1
Read System Description Section	Read the System Description section to familiarize yourself with the system platform. Reference sections 3.1 through 3.7
Determine Customer Network Requirements	Before completing integration and installing the system at a customer location you should discuss the customer networking environment and requirements. Site requirements may necessitate changes to the Windows NT configuration as shipped. Determine what additional protocols the customer will require. Additional protocols will access to the Windows NT Distribution CD-ROM and re-application of Service Pack 4 on the system. Changes will also require replacement of the NT HAL. Determine what the customer computer name and IP parameters will be in advance. Systems are shipped from Avid with the following networking parameters: <ul style="list-style-type: none"> Company Name and Organization: Name: Avid Technology Organization: Avid Technology Computer Name: AvidTechnology TCP/IP protocol applied with DHCP configured.
Inventory System	Inventory the system to insure all parts are present.
Remove system unit side panel	Remove left side panel from system unit by grasping and pulling the thumb hold, then sliding cover towards the front of the system unit.
Connect Keyboard and Mouse	Connect the keyboard to the keyboard port on the rear I/O connector panel. Connect the IBM PS2 mouse to the PS2 mouse port on the rear I/O connector panel. Reference section 5.3 for connector location.
Connect Monitor to AGP VGA connector.	Connect a single monitor to the AGP graphics card. Reference section 5.3 for connector location.
Connect Power Cord and Power up system	Connect power cord to the system unit. System will power up for a brief interval and then shutdown. Apply power to the system and check that the IBM logo is visible on the display. If no screen information (blank monitor), correct the problem.

Integration Step	Reseller Action Required
<p>Verify system integrity from Avid manufacturing</p>	<p>This system was pre-built to a certain point. Before commencing with Avid Symphony or Xpress board and software installation, you should perform a quick review of the system as shipped by Avid. If any areas checked do not match this integration guide you must correct the discrepancies and report them to Avid.</p> <p>Verify the following areas:</p> <ol style="list-style-type: none"> 1. Power on system and enter the system BIOS by pressing F1 2. Spot check the following BIOS areas: <ul style="list-style-type: none"> Devices and I/O Ports USB Support = Disabled Ethernet Setup/ Ethernet Support = Enabled Network Boot = Disabled Advanced Setup PCI Parity = Disabled Network Adapters = Enabled Power Management ACPI BIOS Mode = Disabled APM = Disabled 3. Exit the system BIOS and restart the system. 4. Enter the Adaptec 7895 BIOS by pressing Ctrl A when displayed on-screen. 5. Spot check the following Adaptec 7895 ROM settings: <ul style="list-style-type: none"> Sync Transfer Rate is set to 20MB/s for all SCSI ID on channel A Sync Transfer Rate is set to 20MB/s for all SCSI ID on channel B. 6. Boot Windows NT and log on to the system. <ul style="list-style-type: none"> User Name: Administrator (No password required. Press "Enter") 7. Verify Windows NT Service Pack 4 is installed on the system. Refer to section 6.4 for instructions. 8. Check that the minimum and maximum pagefile size is set to 300MB. Use the System Control Panel Performance tab to review the pagefile size. 9. Check that the system has only one Hardware profile assigned. This should be "Original Configuration". Use the System Control Panel Hardware Profiles tab to review. 10. Verify that MIDI device drivers were installed properly on the system. Launch Windows NT Diagnostics from the Administrative Tools program group. Open the resource tab and insure that the MPU-401 device is at IRQ 9. 11. Verify the Windows NT HAL.DLL file size is 52,384 bytes. 12. Check that the Organization is equal to the Avid Technology. Select My Computer, right mouse click and choose Properties. The second line under "Registered to:" is the organization. This will require modification further in the integration process.

Integration Step	Reseller Action Required
Read the PCI Board Configuration Sections	Read the PCI Board Configuration section and charts to understand the proper slot utilization and requirements for Avid hardware. Reference sections 5.8 through 5.8.2 for more information.
Remove AGP Graphics Card	The AGP graphics card supplied with the IBM Intellistation system must be removed before installing the Avid Meridien Display Controller (EDC) board. The board must be shipped with the system for troubleshooting purposes.
Install Adaptec F940 Fibre Channel	If present, install the Adaptec F940 Fibre Channel board in the system. Reference section 5.9 for more information.
Install Adaptec 3940 SCSI Adapter	If present, install the Adaptec 3940 SCSI board in the system. Reference section 5.10 for more information.
Install Meridien Digital Media Board and 3D DVE board.	If you are configuring a system with the 3D DVE board set, connect the cables from the board set to the Avid Meridien Digital Media Board. Install Avid Meridien Digital Media Board and 3D DVE module in the system. Reference sections 5.11 and 5.13 for detailed instructions.
Install the Avid Edit Display Controller	Install the Avid Edit Display Controller in the system. Reference section 5.12 for detailed instructions.
Connect Display Monitors	Connect the primary and secondary display monitor (if present) to the EDC Boot and Edit connectors. Reference section 5.12 for detailed instructions.
Attach Dongle to Parallel Port	Attach the application key (dongle) to the parallel port. Reference section 5.3 for connector location.
Connect Meridien I/O Breakout Box (BOB)	Connect the cable between the Meridien Digital Media Board connector labeled “M” and the Meridien I/O Breakout Box (BOB). Full instructions and references are in section 5.14

Integration Step	Reseller Action Required
Connect Disk Drives	<p>Connect disk drives to the appropriate disk controller, either SCSI or Fibre Channel. What drive types and how they are configured is dependent on the end-user requirements and where the system is built or tested.</p> <p><u>Channel Configuration</u> - If you are testing the configuration before delivery, configure either the customer disk drives or use a set of drives from your test-bed.</p> <p><u>End-User Configuration</u> – Configure drives based on operational requirements.</p>
Power up system.	Verify yellow LED on EDC board is flashing in a steady state, approximately once per second.
Verify disk drives are identified on SCSI adapters.	If any disk drives are connected to SCSI adapters on the system, verify the SCSI adapter BIOS scan identifies each disk drive. If not, power down the system and check cables and termination.
Configure Adaptec 3940 SCSI Parameters	<p>If present in the system, configure the Adaptec 3940 controller BIOS parameters. Press “Ctrl A” to enter the Adaptec BIOS when displayed on the monitor.</p> <p>Key parameters to configure are Bus Bandwidth setting to 20MB/s for all devices on channels A and B.</p> <p>Reference sections 5.10.1 through 5.10.2 for full instructions.</p>
Select VGA Mode from Windows NT boot menu	Allow operating system to boot in basevideo VGA mode by choosing the VGA option in the Windows NT boot menu.
Disable the MGACtrl service	If the system has a Matrox Millenium or G200, disable the MGACtrl Service. Refer to section 7.2 for more information.
Install Adaptec Fibre Channel device driver	<p>If the board is present in the system, install the Adaptec Fibre Channel device driver. Avid supplies this driver on diskette with each F940 option.</p> <p>Refer to section 7.4 through 7.4.2 for detailed instructions.</p>
Install the Avid application software	Insert the Avid Symphony or Xpress CD-ROM in the driver and open the Windows NT Explorer. Choose and double-click Setup.EXE. Install Avid Symphony or Xpress on drive D:. Do not restart when asked.
Install EDC Number Nine display driver	<p>Install the Avid Edit Display Controller (EDC) Number Nine display driver and reboot the system.</p> <p>Reference sections 7.6 through 7.6.1 for more information.</p>

Integration Step	Reseller Action Required
Complete Number Nine Display Driver setup	Choose resolution 1024 x 768 for single monitor systems or 2048 x 768 for multiple monitor systems. Test the resolution and apply the change. Reference sections 7.6.1 for more information.
Verify the Media board driver starts	Examine the Devices Control Panel and verify the Meridien Digital Media board device driver started. Reference section 7.5 for more information.
Verify the EditDMA driver starts	Examine the Devices Control Panel and verify the EditDMA device driver started. Reference section 7.6.2 for more information.
Verify the 3D DVE board driver starts.	Examine the Devices Control Panel and verify the 3D DVE board device driver started. Reference section 7.10 for more information.
Verify the Sentinel driver starts.	Examine the Devices Control Panel and verify the Sentinel device driver started. Reference section 7.11 through 7.11.1 for more information.
Perform hardware confidence tests with Avid System Test	Perform functional confidence tests using Avid System Test. For more information about Avid System Test refer to the Avid Symphony or Xpress Setup Guide.
Create Hardware Profiles	Create Hardware Profiles Refer to section 6.11 for more information.
Change System Ownership Fields in NT Registry	Use Regedit or Regedt32 to change the Windows NT registration information so it reflects the end-user customer and organization. HKLM\SOFTWARE\Microsoft\Windows NT\CurrentVersion\RegisteredOrganization to End User Organization HKLM\SOFTWARE\Microsoft\Windows NT\CurrentVersion\RegisteredOwner to End User Owner Refer to section 6.12 for more information.

Integration Step	Reseller Action Required
Create Windows NT Repair Disk (Avid Operational ERD)	<p>Since you are this far in the process, all Avid recommended hardware, drivers, and applications are successfully installed and tested and the system is as close to SHIPPING configuration as possible.</p> <p>Label a diskette "Avid Operational ERD". Open a command prompt and type rdisk /s to create the repair disk.</p> <p>If you will be testing the customer disk drives and configuration as part of your integration process, re-create the Operational ERD when ready to sign the system over to the customer.</p> <p>Full instructions and references are in section 9.1</p>
Create a Windows NT Boot Disk	<p>Create a Windows NT Boot disk by copying the following files to a diskette:</p> <p>BOOT.INI NTDETECT.COM BOOTSECT.DOS (If it exists) NTLDR</p> <p>Full instructions and references are in section 9.3</p>
Software Configure Disk Drives	<p><u>Channel Configuration</u> - If you are testing the configuration before delivery, configure either the customer disk drives or use a set of drives from your test-bed.</p> <p><u>End-User Configuration</u> – Configure drives based on operational requirements.</p> <p>Configure the drives in an NTFS stripe set based on the resolution matrix in section 10.10. Launch the Disk Administrator in the Administrative Tools program group to create the stripe set.</p>
Perform Application Test	<p>Launch Avid application to verify the application and hardware can communicate properly. Use your own confidence routines, but try to exercise key areas within the applications. Suggested areas to cover include a quick digitize operation, simple sequence construction, and titles. If you have a 3D DVE board installed you should test a couple real time effects.</p>
Delete DISK Key	<p>If the drives you used to test the system will not be installed at the customer site you must remove the DISK key from the NT registry to avoid nuisance event entries about missing FT members. If you configured the customer drives, do not delete the disk key.</p> <p>Reference section 9.6 for more information.</p>
Shutdown Windows NT and prepare the system for delivery	<p>Integration process is complete.</p>

3. IBM Intellistation M-Pro System Description

This section describes the features and components of the IBM Intellistation M-Pro Model 6889 workstation.

3.1 System Board Overview

The IBM Intellistation M-Pro workstation is based on an IBM designed extended ATX system board using the Intel 440BX AGPset as its foundation.

Processor

The system board accepts up to two Intel Pentium II or Pentium III processors. Because the system board is capable of dual processors there is an Intel APIC present to provide interrupt control and mapping. Direct user control of the mapping parameters is not possible, nor is control of the APIC. Current processor specifications supported on this system:

Processor(s):	Up to two Intel Pentium II or two Pentium III
Processor clock speed:	Pentium II 350,400,450MHz Pentium III 450, 500MHz
SECC Format:	Slot 1
Math co-processor:	Built-in
L1 internal cache:	32KB
L2 external cache std/max:	512KB / 512KB
L2 external cache type:	ECC Write-back synchronous pipeline burst
L2 cache organization:	4 way set associative non-blocking

Chipset

The system board is designed around the Intel 440BX AGPset core logic which implements a 100MHz front side system bus. The 440BX AGPset also provides a memory controller, multifunction logic for peripheral interfacing, as well as data paths and control for the AGP and PCI buses.

AGP Interface

The system board implements one accelerated graphics port (AGP) slot. Designed to accept a video graphics device, AGP is a 64-bit high performance interface intended to off load video data from the PCI bus.

PCI Bus

The system board has five PCI slots arranged as a single non-bridged bus. PCI slot 1 (closest to the processor) has a extension slot for an Adaptec ARO1130 RAIDport board. PCI slot 5 is considered shared with the ISA slot. The bus width is 32-bits and clock speed is fixed at

33MHz. Each slot is capable of bus mastering, is compliant with the PCI 2.1 specification, and accepts 5 volt or 3.3 volt full length interface cards.

ISA Bus

The system board has one ISA slot that is shared with the last PCI slot. The bus width is 16-bits and speed is fixed at 8.3MHz. The slot accepts 5-volt interface cards only.

Additional devices are configured to the ISA bus through the Intel PIIX4 Multi-Function I/O logic.

IDE Bus Master Interface

The system board has a PCI Bus Master IDE interface implemented by the Intel PIIX4 logic. Two IDE busses, primary and secondary, are provided via two 40-pin connectors on the system board. Up to four IDE devices can be attached to the system board connectors using ribbon cables. On each bus, one IDE device is designated as the primary (master) device, while the other is designated the secondary (slave) device. These designations are determined by switch or jumper settings on each IDE device. If a single device is connected to a bus, it must be designated as a primary device.

IBM designates IDE 1 for the primary IDE bus, and IDE 2 for the secondary bus. These designations may change in the system BIOS if one bus is disabled.

Adaptec 7895 Ultra-Wide SCSI

The system board includes an integrated Adaptec 7895 dual channel Ultra-Wide SCSI controller. One 16-bit channel is routed internally to provide support for a SCSI system drive and/or expansion bay peripherals. The second channel is routed to the rear of the system providing a connection for external 16-bit SCSI peripherals. The system board also includes a connector to route an 8-bit SCSI chain with appropriate cables. Use of the 8-bit connector forfeits configuration of one 16-bit channel.

Intel EtherExpress Pro100B Network Interface

An integrated Intel EtherExpress PRO100B 82558 network interface provides 10/100 BaseT ethernet connectivity capability.

Crystal Audio Sound

A Crystal Audio 4235 audio sound chip provides 16-bit audio capability and support for MPU-401 MIDI emulation in single processor systems with a special Windows NT installation procedure.

Memory

Four 128-pin DIMM slots are present on the system board providing support for up to 1GB of physical host memory at current densities. See the **Hardware Configuration** section for more information about the memory requirements.

Ports

Serial Ports - There are two external 9 pin DB9M serial ports implemented on the system board. Each port employs a 16550 UART with 16 byte buffers.

Parallel Ports - One external 25 pin DB25F parallel port with EPP/ECP capabilities is provided.

Sound/MIDI- Accepts audio line in, line out, and microphone through jacks on the rear of the system box. MIDI/Joystick connection is accomplished through an optional cable routed from the system board to the rear of the system.

USB - Two USB headers are provided.

3.2 Configured Peripherals

- System Disk - Varies size may vary by system model but must be a SCSI bus type device.
- CD-ROM - All CD-ROM drives are IDE bus designs. The drive manufacturer and model varies by system model.
- Diskette Drive - All diskette drives are 3.5 inch 1.44 MB units. The drive manufacturer and model varies by system model.

3.3 Chassis

The system components are housed in a mini-tower chassis. Layout is straightforward and clean with no obvious areas that would create maintenance difficulties. Airflow is applied to the card area by one fan and system drive has a dedicated fan. A single fan with a shroud attachment redirects airflow directly to the processors. The power supply has one fan.

Expansion Bays

1. Can accommodate an additional one 3.5-inch half-height disk drive internally.
2. Can accommodate one additional 5.25-inch externally accessible peripheral.
3. The number of bulkhead card panel slots is limited to the number of add-in card slots.

Power Control

1. The system has a delayed acting power switch. To power down the system the switch must be depressed for approximately five seconds.
2. The system will briefly cycle power if the power line cord is attached. This is a normal condition. Always wait a few seconds before installing or removing any devices from the system.
3. The AC line voltage is automatically configured via an auto-sensing 330W power supply.

3.4 Keyboard

IBM supplies a Windows 95 104 key standard PS/2 style keyboard with each system. Avid replaces this keyboard with a customized keyboard featuring labeled keycaps for the Symphony and Xpress NT products.

3.5 Mouse

Depending on the model, a three button Windows mouse or Microsoft two button mouse is standard. The mouse port accepts only PS/2 style male connectors.

3.6 Graphics Cards and Monitors

IBM offers three graphics card choices with the Intellistation. **Some Avid products such as Symphony require removal of the standard AGP graphics card in favor of an Avid designed Edit Display Controller (EDC).** For more information, consult the **Hardware Configuration and Windows NT Device Drivers** sections of this document.

Standard Graphics Cards and Resolution

Matrox Millenium II or G200 AGP-based with 8MB (16MB max) of on-board memory. Provides resolutions up to 1600 x 1200 @65K colors. This is the recommended choice for standard business 2D graphics.

PERMEDIA 2 enhanced AGP-based with 8MB of on-board memory. Provides resolutions up to 1600 x 1200 @65K colors. This is the recommended choice for entry level 3D graphics.

Intergraph Intense 3D Pro 3400, PCI-based 16MB std./max frame buffer (SDRAM) and 16MB (SGRAM) of texture memory. Provides 32-bit (true color) 16M colors at 1280 x 1024. An optional Intergraph Intense 3D Pro 3400GA Geometry and Lighting Accelerator is available. This is the recommended choice for advanced 3D graphics.

Monitors

Systems may be purchased with or without monitors. Depending on the Avid product intended for use with the Intellistation two display monitors may be required. For more information on display monitors, consult the **Hardware Configuration** section of this document.

3.7 IBM Intellistation Models and Options

IBM Model	Processor	Disk	Std Memory	Graphics Card
688924U	400 MHz	4.2GB SCSI	128MB	Matrox Millenium II AGP
688964U	400 MHz	4.2GB SCSI	128MB	Matrox G200 AGP
688952U	P3-500 MHz	9.1GB SCSI	128MB	Matrox G200 AGP

Models shipped by Avid since Symphony and Xpress NT introduction.

4. BIOS

Modifications to certain system BIOS parameters must be made for proper operation. Press **F1** to enter the BIOS during a cold power up of the system. Use the arrow keys on the keyboard to navigate the BIOS menus. Reset all BIOS parameters to the default values by selecting "Load Default Settings" from the BIOS menu and reference the following charts for BIOS information and required changes.

Verify and adjust all parameters to reflect the chart. There may be slight variations between the parameter values listed here and the specific system model being configured.

When changes are completed select "Save Settings" then "Exit Setup".

4.1 BIOS Revisions

Vendors commonly release BIOS updates to add new features or correct problems. Always consult with Avid Systems Engineering before applying a BIOS update as changes may have an integration impact. Never downgrade the BIOS revision in the system unless Avid Systems Engineering or the platform vendor issue explicit instructions to do so. **It is also not advisable to update the BIOS to a more recent revision as long as the revision in the system is at the accepted minimum for the processor type configured.**

Should a BIOS update be necessary, the procedure is included in this section.

Current Revision Matrix

Revision	Status	Key Feature
NUKT35AUS	BIOS Date 3/25/99	Graphics PROM init code
NUKT34AUS	BIOS Date 2/12/99	Pentium III support
NUKT33AUS	Not Released	
NUKT32AUS	BIOS Date 12/08/98	Expansion Chassis Support
NUKT31AUS	Not Released	
NUKT30AUS	BIOS date 10/19/98	
NUKT29AUS	BIOS date 8/7/98	
NUKT28AUS	Not Released	
NUKT27AUS	BIOS date 7/8/98.	Minimum revision for MIDI port functionality.

4.2 BIOS Groups

The chart represents the Intellistation BIOS group categories. Each category may be selected by navigating with the keyboard arrow direction keys and pressing the enter key.

System Summary	Basic information about the processor and other integrated system devices
Product Data	Machine type, BIOS revision and date.
Devices and I/O Ports	Integrated device information and setup.
Start Options	Boot options, miscellaneous configuration.
Date and Time	System date and time.
System Security	Remote administration, hardware password protection.
Advanced Setup	ROM shadowing, PCI configuration
ISA Legacy Resources	Memory, I/O, and interrupt resource assignments.
Power Management	ACPI and APM configuration.
Save Settings	Commits parameter changes
Restore Settings	Restores previous values
Load Default Settings	Firmware default values
Exit Setup	

4.3 System Summary

Verify the information displayed in this category accurately reflects the system configuration. **These values are not user modifiable. Any errors in the configuration must be corrected through other BIOS sections.**

Category	Default Value	Comments
Processor	CPU Type	Verify processor type matches the type in your system.
Processor Speed	CPU Speed	Verify processor speed matches.
Dual Processor Installed	Not Installed	
L2 Cache Size	512KB	
Cache State	Enabled	
System Memory	128MB	Verify memory size is correct for installed amount
Memory Type	Memory Type	Should reflect ECC unless types are intentionally mixed.
Video Controller		Indicates the Vendor AGP based video device. Normally Matrox
Ethernet Support	Enabled	
Audio Support	Enabled	
SCSI Support	Enabled	The SCSI controller must be enabled in the Devices and I/O Ports screen.
Diskette Drives	Drive Type	Verify one diskette drive is detected.
IDE Hard Drives	Drive Type	Should reflect any configured devices.
CD-ROM Drives	Drive Type	Should reflect any configured devices.

4.4 Product Data

The values in the Product Data Group are not user modifiable.

Category	Default Value	Comments
Machine/Model Type	6889xxx	Machine 6889 Model Type xxx (Where xxx identifies the model).
Flash EEPROM Revision Level	NUKTxxAUS	1. 512K ROM (All systems use this size flash ROM) 2. Revision Will Vary
Boot Block Rev Level	Unique identifier	Unique identifier
System Board Identifier	Unique identifier	Unique identifier
System Serial Number	Unique identifier	Unique identifier
System UUID	Unique identifier	Unique identifier
BIOS Date	Varies	

4.5 Devices and I/O Ports

Change the parameter values to reflect the chart values. Default values may differ between systems.

Category	SubCategory	Recommended Value
Mouse		Installed
Diskette Drive A		1.44 MB 3.5"
Diskette Drive B		Not installed
Serial Port Setup	Serial Port A Address	3F8h
	Serial Port A IRQ	4
	Serial Port B Address	2F8h
	Serial Port A IRQ	3
USB Setup	USB Support	Disabled
	USB Kybd/MouseSupport	Autodetect
Parallel Port Setup	Parallel Port	378h
	Parallel Port Mode	Extended
	Parallel Port Extended Mode	Bi-directional
	Parallel Port Extended Mode DMA	No DMA
	Parallel Port IRQ	7
Video Setup	Video Controller	Will reflect AGP card type installed.
	Video Memory	8192 MB
	Primary Display	PCI or AGP Depends on card type installed. (This field appears beginning with Rev 32)
	Video Aperture	Unimportant
	Palette Snooping	Disabled
	Video Interrupt	Enabled
IDE Drives Setup	IDE Hard Disk 0-3	Configuration Dependent
	IDE CD-ROM 0-3	High Performance
Audio Setup	Audio Support	Enabled
	Game / MIDI Port	Enabled
Ethernet Setup	Ethernet Support	Enabled
	Network Boot	Disabled
	MAC Address	Hardcoded
SCSI Setup	SCSI Support	Enabled

4.6 Start Options

Change the BIOS parameter values to reflect the chart values.

Category	Sub Category	Item	Recommended Value
Startup Sequence	Primary Startup Sequence		
		First Startup Device	Diskette Drive 0
		Second Startup Device	CD-ROM
		Third Startup Device	Hard Disk 0
		Fourth Startup Device	Disabled
	Automatic Power On Startup Sequence		Disabled
		First Startup Device	Unimportant
		Second Startup Device	Unimportant
		Third Startup Device	Unimportant
		Fourth Startup Device	Unimportant
	Error Startup Sequence		Primary
Keyboard NumLock State			On
Keyboard Speed			Fast
Disketteless Operation			Disabled
Keyboardless Operation Mode			Disabled
Power On Self Test			Quick
Power On Logos			Enabled
Power On F1/Esc Options			Enabled
Power On Status			Disabled
Virus Detection			Disabled

4.7 Date and Time

Change to reflect current date and time.

Category	Recommended Value
Time	Current Time
Date DD/MM/YYYY	Current Date

4.8 System Security

Changes to the system security area should be conducted by end users only.

Category	Default Values	Comments
Enhanced Security	Disabled	Can only be changed when flashing the system BIOS. See IBM user documentation for more information.
Secure IDE Devices and Diskette Drives	Enabled	
Remote Administration		
Adapter ROM Security	No	
AssetCare	Disabled	
Asset ID	Disabled	

4.9 Advanced Setup

Change the BIOS parameter values to reflect the chart values. Default values may differ between systems.

Category	Sub Category	Recommended Value
Cache Control	Cache State	Enabled with ECC
	L2 Cache Size	512KB
ROM Shadowing		System Dependent
PCI Control	PCI Adapter Reset	Enabled
	PCI Parity	Disabled
	PCI Bus Master	
	Network Adapters	Enabled
	Mass Storage Adapters	Enabled
	Display Adapters	Enabled
	Multimedia Devices	Enabled
	Communication Adapters	Enabled
	Serial Adapters	Enabled
Plug and Play Control	Set Device Node	Disabled
	Address Decode	16-Bit
	Plug and Play Operating System	No
Processor Control	Processor 0 ID	System Dependent
	Processor Updating	Enabled

4.10 ISA Legacy Resources

Change the BIOS parameter values to reflect the chart values. Default values may differ between systems.

Category		Description	Recommended Value
Memory Resources			No Changes Required
I/O Port Resources			No Changes Required
DMA Resources			No Changes Required
Interrupt Resources	0	NMI	Not modifiable
	1	Keyboard	Not modifiable
	2	Cascade	Not modifiable
	3	Serial Port 1	Serial Port 1
	4	Serial Port 2	Serial Port 2
	5	Available	Available
	6	Diskette Drive	Not modifiable
	7	Parallel Port	Parallel Port
	8	Real Time Clock	Not modifiable
	9	ACPI	This will be reported as available after disabling ACPI
	10	Available	Available
	11	Available	Available
	12	Mouse	Not modifiable
	13	Coprocessor	Not modifiable
	14	IDE Drives	Available
	15	IDE Drives	Secondary IDE (CD-ROM)

4.11 Power Management

This area of the BIOS contains extensive options relative to remote PC administration and power management. Some of these items are not fully supported by Windows NT 4.0. Specific power management changes should be conducted by end users only.

Category	Sub Category	Recommended Value
ACPI BIOS Mode		Disabled
APM		Disabled
Activity Monitor		Unimportant
Automatic Power On	Wake on LAN	Disabled

4.12 Updating the System BIOS

Vendors commonly release BIOS updates to add new features or correct problems. It is not advisable to update the BIOS to a more recent simply because a more recent version exists. If a BIOS change is required, Avid Systems Engineering will release information relevant to the update and how to obtain. **DO NOT ARBITRARILY UPGRADE THE SYSTEM BIOS.**

The following procedure should be used if a BIOS update is necessary. To create a flash diskette you will need a formatted 2.0MB HD DS diskette. Open the Windows NT Explorer, select the BIOS update file, and double click the BIOS update file to launch. Follow the instructions on the display to create the diskette.

1. Before updating the system BIOS you should record any settings you made to the BIOS configuration. Cycle power on the system and press **F1** to enter BIOS configuration/setup.
2. Using the charts in this document as a guide, record all parameter values currently set in the system BIOS. Some parameter settings may have to be re-entered after updating the BIOS.
3. Power down the system and insert the Flash Diskette in the diskette drive.
4. Press **ENTER** to start the process.
5. Choose your country when prompted and press **ENTER**.
6. The system serial number is displayed and you are asked if you would like to update the serial number.
 - If you choose "y" then you are prompted to enter the serial number. **Choose N to leave the existing serial number intact.**
7. The machine model/type is displayed and you are asked if you would like to update the model/type.
 - If you choose "Y" then you are prompted to enter the machine/model type. **Choose N to leave the existing model intact.**
8. The application will inform you that your system can be enabled to use enhanced security features. Choose **N** to bypass these features.
9. The application will ask you if you want to change the logos displayed during startup. Choose **N** to leave the logo unchanged.
10. The current BIOS level on the system is compared to that on the flash update diskette.
 - If the BIOS levels are the **same**, a message is displayed stating
"The post/BIOS code in the system is the same version as that on the diskette. Press **ENTER** to continue. Press ESC to cancel."

Your system does not require a BIOS update and you should cancel the procedure by pressing the ESC key.

- If the BIOS level on the flash diskette is **newer** than the system ROM, you will receive the message:

"The system post/BIOS is being updated. This may take up to 2 minutes. Do not power off or restart the system during this procedure."

- If the BIOS level on the flash diskette is **older** than the system ROM, you will receive the message:

"The post/BIOS code in the system is a newer version than that on the diskette if you continue, the older version will replace the newer version in the system."

If you press **ENTER**, you will receive the message:


"The system post/BIOS is being updated. This may take up to 2 minutes. Do not power off or restart the system during this procedure."

11. The update is complete and you should remove the diskette and press **ENTER** to reboot the system.
12. Press **F1** to enter the BIOS configuration/setup screens and verify/change all parameters to the values you recorded in step 2.
13. Procedure is complete.

5. Hardware Configuration

This section describes the specifics for reliable hardware configuration of Avid product on the IBM Intellistation M-Pro. Follow all procedures and recommendations as detailed.

5.1 System Board Graphic

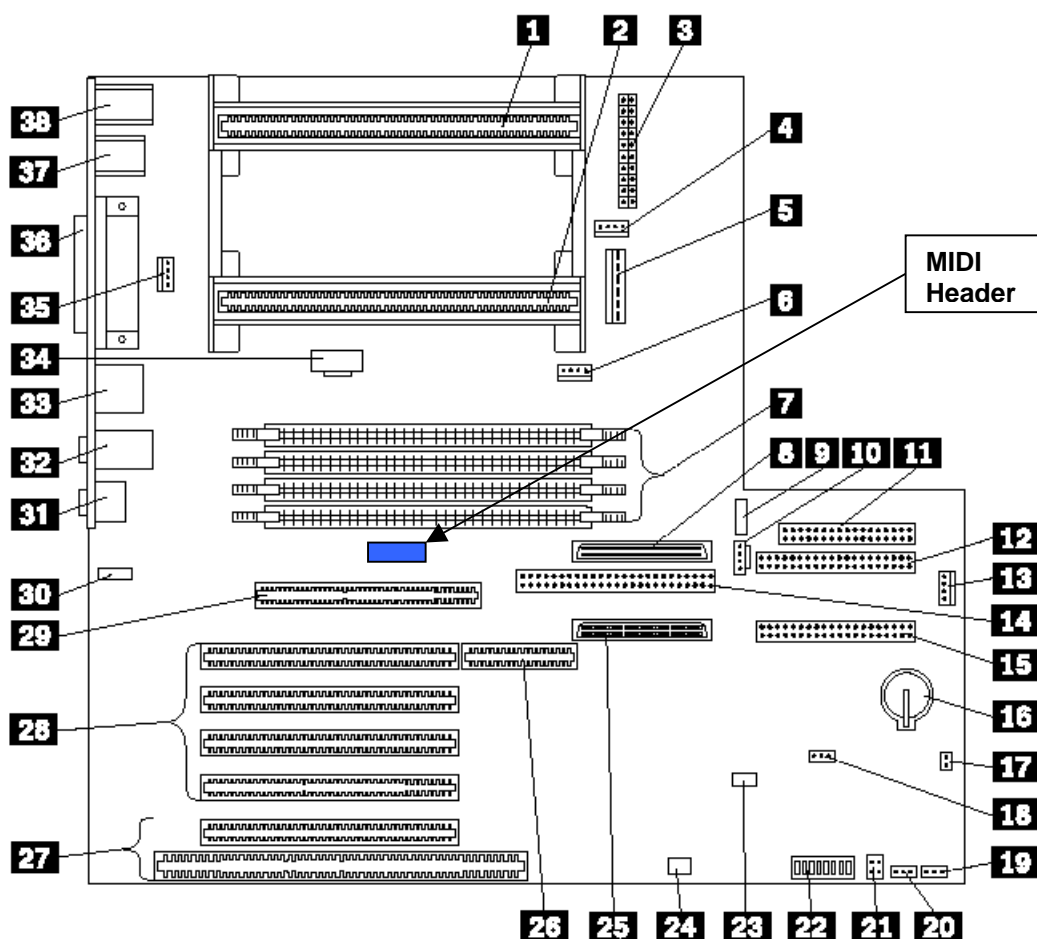

IBM 6889 System Board

Item	Location	Description
1	U25	Secondary CPU or Terminator
2	U24	Primary CPU
3	J5M1	Power Connector
4	J4	Secondary CPU Fansink Connector
5	J2M1	Power Connector
6	J3	Secondary CPU Fansink Connector
7		DIMM Slots 0 - 3
8	J10D1	SCSI Channel B (16-bit)
9	J9B1	Power Switch and LED Connector
10	J11B1	Hard Disk LED Connector
11	J8F2	Diskette Drive Connector
12	J8F1	Primary IDE Connector
13	J15	RFID Antenna Connector
14	J10E1	SCSI Channel B (8-bit)
15	J8F1	Secondary IDE Connector
16		Battery
17	J12B3	Internal Speaker Connector
18	J7E1	Clear CMOS Jumper
19	J5	Front Panel Fan Connector
20	J6	Front Panel Fan Connector
21	J12B1	Tamper Detect Switch
22	SW1	Switch Pack
23	J6D1	Wake on LAN Connector
24	J13	Wake on Modem Connector
25	J10F1	SCSI Channel A Connector
26	J4D1	RAIDport Extension
27		Shared PCI/ISA Slot
28		PCI Slots
29	J2E3	AGP Slot
30	J1F1	CD Audio Connector
31		Microphone Connector
32		Audio Line In/Out Connector
33		RJ-45 Ethernet Connector
34	J4F1	JTAG
35	J7	Rear Fan Connector
36		Parallel, Serial 1 and 2 Ports
37		USB Headers 1 and 2
38		Keyboard / Mouse Ports

System Board Key

5.2 Switches and Jumpers

Verify the switch settings and jumper positions are correct for this system model. The switch pack is located on the system board, refer to item #22 on the layout. The example below shows the switch settings for a 400MHz Pentium II system. **DO NOT CHANGE THE PROCESSOR SPEED UNLESS IT IS SET IMPROPERLY.**

8	7	6	5	4	3	2	1
OFF	OFF	OFF	OFF	ON	OFF	ON	ON

Pentium II Processor	Speed	SW1-1	SW1-2	SW1-3	SW1-4
Speed Setting	350MHz	OFF	OFF	ON	ON
	400MHz	ON	ON	OFF	ON
	450MHz	OFF	ON	OFF	ON

Processor speed settings are not required with Pentium III processors. Pentium III processors ignore switch positions 1-4.


		Switch	Setting
ROM Operation	Normal	SW1-5	Off (D)
	Recovery	SW1-5	On
Ethernet Operation	Normal	SW1-6	Off (D)
	Disabled	SW1-6	On
Administrator/BIOS Password	Locked	SW1-7	Off (D)
	Unlocked	SW1-7	On
Diskette Operation	Normal	SW1-8	Off (D)
	Read Only	SW1-8	On

		Jumper	Pins
Clear CMOS and Password	Normal Setting	J7E1	2-1
	Erase Password and Clear CMOS		3-2

For more information about the switch pack functions and procedures, reference the IBM system documentation.

5.3 I/O Panel Connections

The figure represents the 6889 rear I/O panel and connectors.

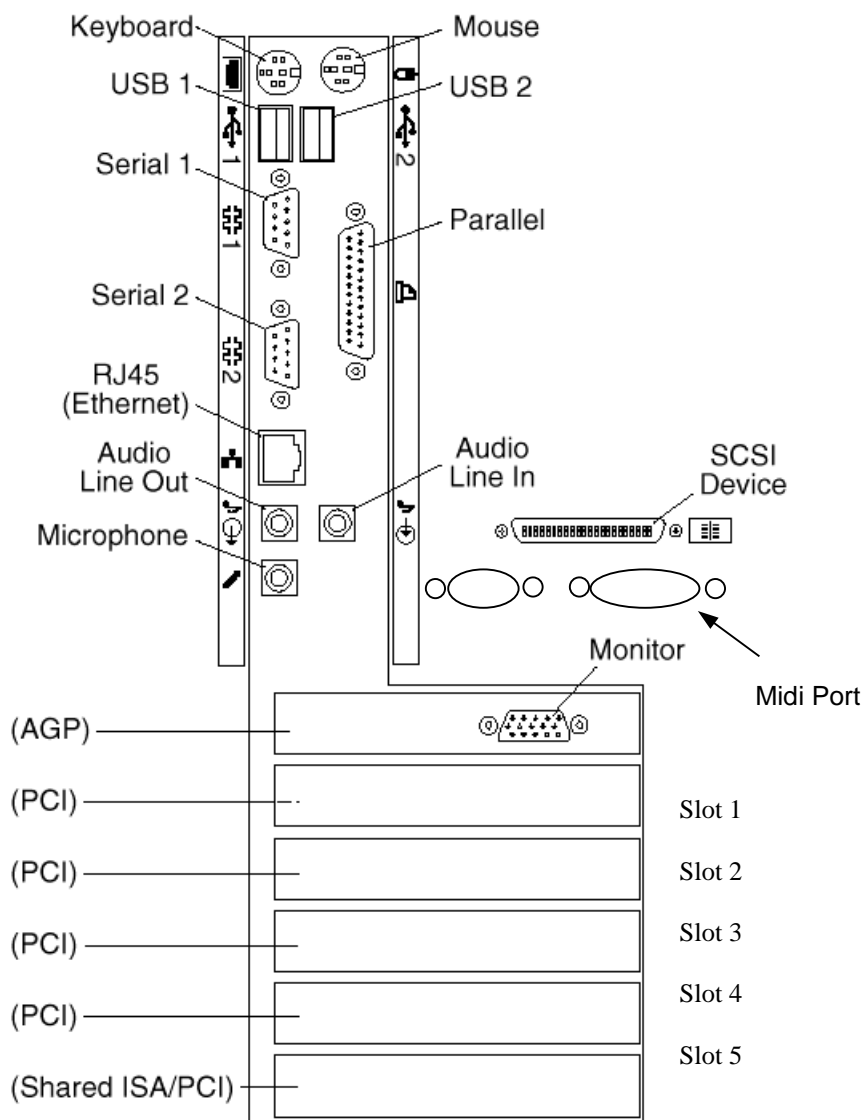

5.4 Central Processor

The system board can support up to two SECC Slot 1 type Pentium II or Pentium III processors. As of this writing available Pentium II processor speeds are 450MHz, 400MHz, and 350MHz. Available Pentium III speeds are 450MHz and 500MHz. Pentium II and Pentium III processors may not be mixed in the same system.

Customers may elect to upgrade processor speed at any time provided Avid has evaluated the processor speed.

Not all Avid NT products are currently supported in multiprocessor configurations. Refer to the chart to determine the appropriate number of processors by product.

Avid NT Product	Supported Processors	Supported Processor Speeds
MediaComposer	1	Pentium II 400, 450, Pentium III 450, 500
Symphony	1	Pentium II 400, 450, Pentium III 450, 500
Xpress NT Deluxe	1	Pentium II 400, 450, Pentium III 450, 500
Xpress NT Elite	1	Pentium II 400, 450, Pentium III 450, 500

Important: The absence of a second processor requires a terminator card in the unused processor slot.

5.5 Memory

Four 128-pin DIMM slots are present on the system board providing support for up to 1GB of physical host memory. There are no specific DIMM configuration rules, but each DIMM **must** meet the following specifications:

- Memory may be purchased from any vendor qualified by IBM.
- Must be certified PC100 compliant SDRAM.
- DIMMs from 66MHz systems CANNOT be used in this system.
- Must be 64-bit wide or 72-bit wide error correcting code (ECC) synchronous DRAMs (SDRAMs). If 64-bit and 72-bit DIMMs are mixed, the system will default to a 64-bit data path.
- Mixing ECC and non-ECC type DIMMS will cause the system to default to non-ECC.
- Each SDRAM DIMM must be 32, 64, 128, or 256 MB in size.
- Each SDRAM DIMM must be a 168-pin, unbuffered, +3 VDC, serial PD type.
- Each SDRAM DIMM must use gold-lead connector pads.
- 256MB DIMMS must be registered type.

5.5.1 Identification of PC100 Compliant SDRAM DIMM

To identify 100MHz bus compatible SDRAM DIMM look at the label on the DIMM. All compliant DIMMS have the format PC100-aaa-bbb where the underlined letters represent timing parameters of the module and the revision number of the latest serial presence detect specification. Additionally, the design revision of the SDRAM DIMM specification must be silk screened on the DIMM printed circuit board.

66 MHz SDRAM DIMM do not require these identifications, as the specifications are not as stringent.

5.5.2 Memory Requirements for Avid NT Products

The chart represents the recommended memory requirements for Avid products. Customers may elect to install additional memory if desired. Optimal page file parameters are outlined in the **Windows NT Configuration** section of this document.

Avid NT Product	Minimum Memory	Standard Configuration	Maximum Memory
MediaComposer	128MB	256MB	1GB
Symphony	128MB	256MB	1GB
Xpress NT Deluxe	128MB	192MB	1GB
Xpress NT Elite	128MB	192MB	1GB

5.6 System Board Integrated Devices

This section describes the physical hardware configuration specifics for all system board integrated devices.

5.6.1 Adaptec AIC-7895 SCSI Host Adapter Configuration

The IBM Intellistation M-Pro includes an Adaptec AIC-7895 dual channel Ultra-wide SCSI adapter on the system board. Channel A is routed within the system enclosure, while Channel B is available for use with external peripherals. This procedure describes the recommended BIOS configuration of the controller.

Instructions to load or check device driver revisions are located in the **Windows NT Device Drivers** section of this document.

5.6.1.1 Adaptec Option ROM Configuration

Use this procedure to make modifications to the SCSI bus parameters for all peripherals you intend to connect. **Important:** Before starting this procedure verify SCSI support is enabled in the Devices and I/O Ports section of the system BIOS.

1. Power up the system.
2. Enter the Adaptec 7895 option ROM by holding the **Ctrl** plus the **"A"** key immediately after the Adaptec 7895 SCSI Host Adapter message appears on the monitor.
3. The Adaptec option ROM screens are not mouse driven and must be navigated using the arrow keys. Use the arrow keys to move to the appropriate parameter and the **Enter** key to change values.
4. Two channels 0A, and 0B will be displayed on the upper right hand section of the display. Choose the **0A** channel first and review the parameter settings for each of the sections.
5. When all parameter changes are verified press **Esc** and choose **Yes** to return to the main screen.
6. Choose the **0B** channel and review the parameter settings for each of the sections.
7. When all parameter changes are verified for channel press **Esc** and choose **Yes** to return to the main screen.
8. Press **Esc** and choose **Yes** to save the changes.
9. Restart the system when changes are complete.

5.6.1.2 Adaptec Option ROM Menus

All parameters should reflect the **"Recommended"** values in the charts below. Insure the correct parameters are configured for all devices on both SCSI channels.

NOTE: All systems configured by Avid manufacturing will ship with the Maximum Sync Transfer Rate set to 20 MBytes/sec for each SCSI ID.

SCSI Bus Interface Definitions	Recommended
Host Adapter SCSI ID	7
SCSI Parity Checking	Enabled
Host Adapter SCSI Termination	Enabled

Boot Device Settings	Recommended
Boot Channel	A First
Boot SCSI ID	0
Boot LUN Number(**)	0

SCSI Device Configuration	Recommended
Initiate Sync Negotiation	Yes (Enabled)
Maximum Sync Transfer Rate	20 MBytes/sec
Enable Disconnection	Yes (Enabled)
Initiate Wide Negotiation	Yes (Enabled)
Send Start Unit Command	Yes (Enabled)
BIOS Multiple Lun Support	No (Disabled)
Include in BIOS Scan	Yes (Enabled)

Notes:

1. Insure the correct parameters are configured for all devices on **both** SCSI channels.
2. Leave SCSI disconnects enabled unless there is a specific device that does not support disconnects.
3. The adapter must be configured to use the appropriate negotiation method for the all disks. Never set the adapter to use wide negotiation on narrow disks for example.
4. For each Avid IS9 Pro, or IS18 Pro, the synchronous transfer rate **must** be set to 20MB/s and the maximum number of drives allowed on each external SCSI chain is eight. This requirement is imposed due to performance instability when too many spindles are chained.
5. For LVD only configurations the Maximum Sync Transfer Rate may be changed to 40MB/sec. Refer to the Peripheral Configuration section of this guide for more information.

Advanced Configuration Options	Recommended
Reset SCSI Bus at IC Initialization	Enabled
Extended BIOS Translation for DOS Drives > 1 GB	Enabled
Host Adapter BIOS (Configuration Utility Reserves BIOS Space)	Enabled
Support Removable Disks under BIOS as Fixed Disks	Boot Only
Display <Ctrl-A> Message During BIOS Initialization	Enabled
BIOS Support for Bootable CD-ROM	Enabled
BIOS Support for Int 13h Extensions	Enabled

5.6.2 Intel EtherExpress Pro100 Network Interface

There are no specific physical hardware setup requirements for the network interface other than to verify the system board SW1-6 switch is OFF. Verify that Ethernet Support is enabled in the BIOS (section 4.5), and the Network device is enabled for bus mastering (Section 4.9). The LED on the system board will be illuminated when a network cable is connected to the port even when power is removed from the system unit. This is normal behavior.

The rear I/O connector panel and the front panel also have LED indicators. When a category 5 cable is connected between the 6889 network interface and a building network, these LEDs indicate network-polling activity. The LEDs do not mean the system is configured properly for network operation.

Instructions to load or check device driver revisions are located in the **Windows NT Device Drivers** section of this document.

5.6.3 Crystal Semiconductor 4235 Audio Chip

The Crystal Semiconductor 4235 component provides business-class audio support. There are no specific physical hardware setup requirements for the audio portion of the CS4235 component. Connectors are available on the rear of the system I/O panel for microphone input, analog audio input, and analog audio output.

A MIDI/Game/Joystick cable may be installed to the port header on the system board to allow the use of automated MIDI fader peripherals. Refer to the *System Board Graphic* diagram for the header location. To install the MIDI port cable:

1. On the rear of the chassis below the external SCSI port are two knockout blanks. Use a flat blade screwdriver to twist off the larger of the two knockouts.
2. Insert the keyed cable into the MIDI header on the system board and route the D-Shell connector through the knockout opening. Care should be taken to route the cable away from any module slots.
3. Secure the D-Shell connectors.
4. Cable part number is 0070-00501-01

Instructions to load or check device driver revisions are located in the **Windows NT Device Drivers** section of this document.

5.7 AGP Graphics

The AGP graphics card supplied with the IBM Intellistation system **must** be removed before installing the Avid Meridien Display Controller board. The board must be shipped with the system for troubleshooting purposes.

5.8 PCI Board Configuration

Slot configuration guidelines are mandatory due to the interconnection requirements of the Avid Edit Display Controller, Meridien Digital Media Board, and the 3D effects combination cards. PCI cards must be installed into the system using one of the two configurations shown below.

Observe these points for successful installation:

- PCI slots on the IBM Intellistation are numbered 1-5 with PCI slot 1 closest to the processor.
- Care must be exercised when installing boards into PCI slot 1 as to not damage the internal SCSI cabling in the vicinity.
- Route internal cables away from the PCI modules as to not impede airflow or board maintenance.
- Never attempt to force the board in a slot.
- Insure each board is seated properly in the PCI slot.
- Secure each board to the expansion bulkhead after installation.

Important: PCI boards are assigned certain resources based on BIOS and device driver negotiation. Due to a specific driver address requirements it is vital the Avid Meridien Digital Media I/O and EDC boards are installed in the system simultaneously.



ESD

Caution: System components and modules are extremely sensitive to static electricity. Before handling any modules or components, follow proper electrostatic discharge (ESD) guidelines. Always wear a static strap!

5.8.1 Avid MediaComposer or Symphony Board Configuration Chart

AGP Slot	Device	Comments
1	AGP Graphics Board	Remove when Avid boards are installed

PCI Slots	Device	Comments
		Customer Option Slot:
1	Available Slot	Avid approved disk controller such as Adaptec 3940AUW or customer option board (Not sold through Avid) (See Note 1)
2	Avid Meridien Digital Media Board	
3	Avid 3D DVE Board	Genie/Viper combination
4	Primary Disk Controller	Adaptec F940 Fibre Channel Controller
5	Avid Edit Display Controller	
Onboard	2 Channel UW SCSI Disk Controller	SCSI controller A channel is used for the System Disk SCSI controller B channel can support external drives for audio or graphics storage only. (See Note 2)
Onboard	Intel 82558 Network Interface	Intel Pro100 10/100 BaseT
Onboard	CS4235 Audio	Use of onboard audio for MIDI functions will limit system to a single processor.

1. PCI slot 1 can be used for customer installable options such as an additional Avid approved disk controller, a third party effects processor, or other customer option. Customer options are not supported by Avid.
2. Onboard SCSI support – Symphony configurations use separate SCSI storage for audio files. The Adaptec 7895 controller may be used to support these disks.

5.8.2 Avid Xpress NT Board Configuration Chart

AGP Slot	Device	Comments
1	AGP Graphics Board	Remove when Avid boards are installed

PCI Slots	Device	Comments
1	Available Slot	Customer Option Slot: Avid approved disk controller such as Adaptec 3940AUW or customer option board (Not sold through Avid) (See Note 1)
2	Avid Meridien Digital Media Board	
3	Optional Avid 3D DVE Board	Choose One: - Optional 3D DVE effects board - Non-bus master device option (See Note 2)
4	Primary Disk Controller	Adaptec AHA-3940AUW
5	Avid Edit Display Controller	
Onboard	2 Channel UW SCSI Disk Controller	SCSI controller A channel is used for the System Disk SCSI controller B channel can support external drives for limited resolution media storage only. (See Note 2)
Onboard	Intel 82558 Network Interface	10/100 BaseT
Onboard	CS4235 Audio	Use of onboard audio for MIDI functions will limit system to a single processor.

1. PCI slot 1 can be used for customer installable options such as an additional Avid approved disk controller, a third party effects processor, or other customer option. Customer options are not supported by Avid.
2. If this slot is not used for a DVE option, the slot must be limited to a non-bus master device due to bus constraints. **Disk controllers can not be configured in this slot.**
3. SCSI Support

Onboard Adaptec 7895 can support single stream 2:1 resolution when configured with Avid ISx pro series drives. SCSI only configurations require an Avid approved disk controller for use as the primary disk controller. See **Peripheral Configuration** section of this document for more information.

5.9 Adaptec/JNI AHA-F940 Fibre Channel Controller


If the system requires an Adaptec AHA-F940 Fibre Channel controller, install the board in the recommended PCI slot reflected in the board configuration charts. There are no further internal hardware configuration requirements.

Instructions to load or check device driver revisions are located in the **Windows NT Device Drivers** section of this document.



ESD

Caution: System components and modules are extremely sensitive to static electricity. Before handling any modules or components, follow proper electrostatic discharge (ESD) guidelines. Always wear a static strap!

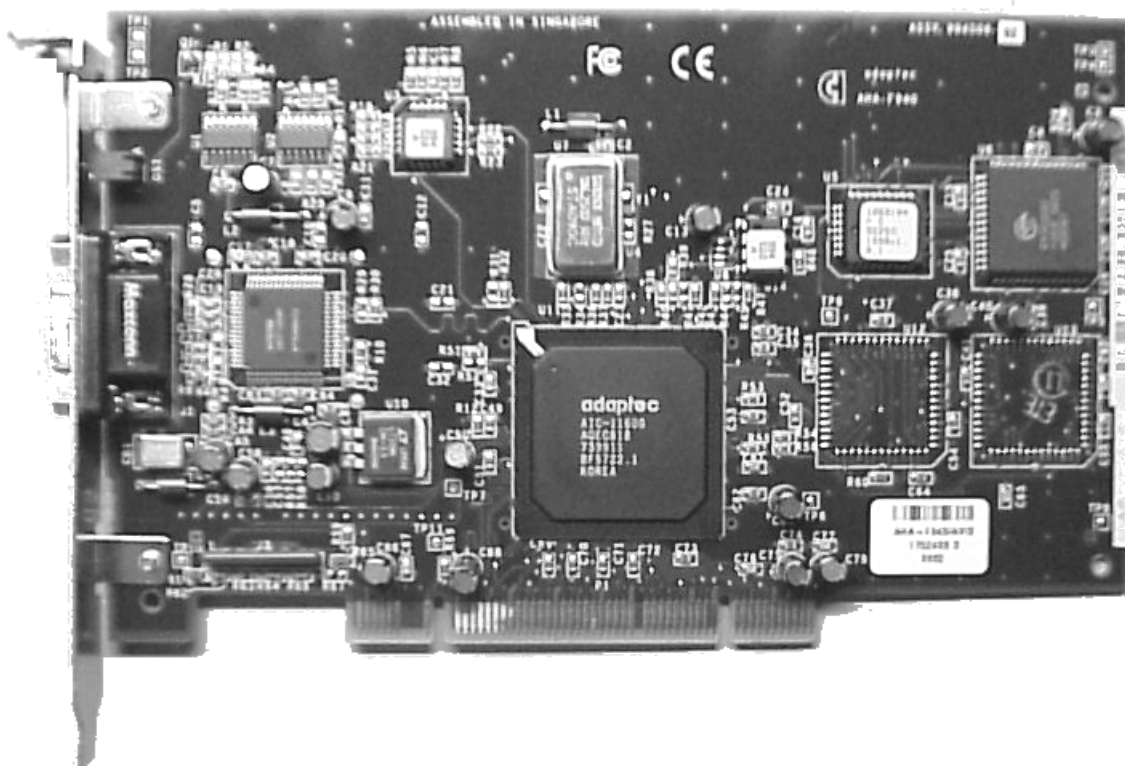

F940 Fibre Channel Controller

5.10 Adaptec AHA-3940 SCSI Host Adapter


Optional Adaptec AHA-3940UW or Adaptec AHA-3940AUW dual channel ultra-wide SCSI adapters may be installed in the system. The AHA-3940UW is identified by one external SCSI port and the AHA-3940-AUW has two mini external SCSI connector ports. Install the board in the recommended PCI slot reflected in the board configuration charts. This procedure describes the recommended physical configuration of the controller.

Since the IBM 6889 includes an onboard Adaptec 7895 SCSI controller, the Adaptec 3940AUW uses the same Windows NT device driver. For instructions about loading or checking device driver revisions refer to the **Windows NT Device Drivers** section of this document.



ESD

Caution: System components and modules are extremely sensitive to static electricity. Before handling any modules or components, follow proper electrostatic discharge (ESD) guidelines. Always wear a static strap!

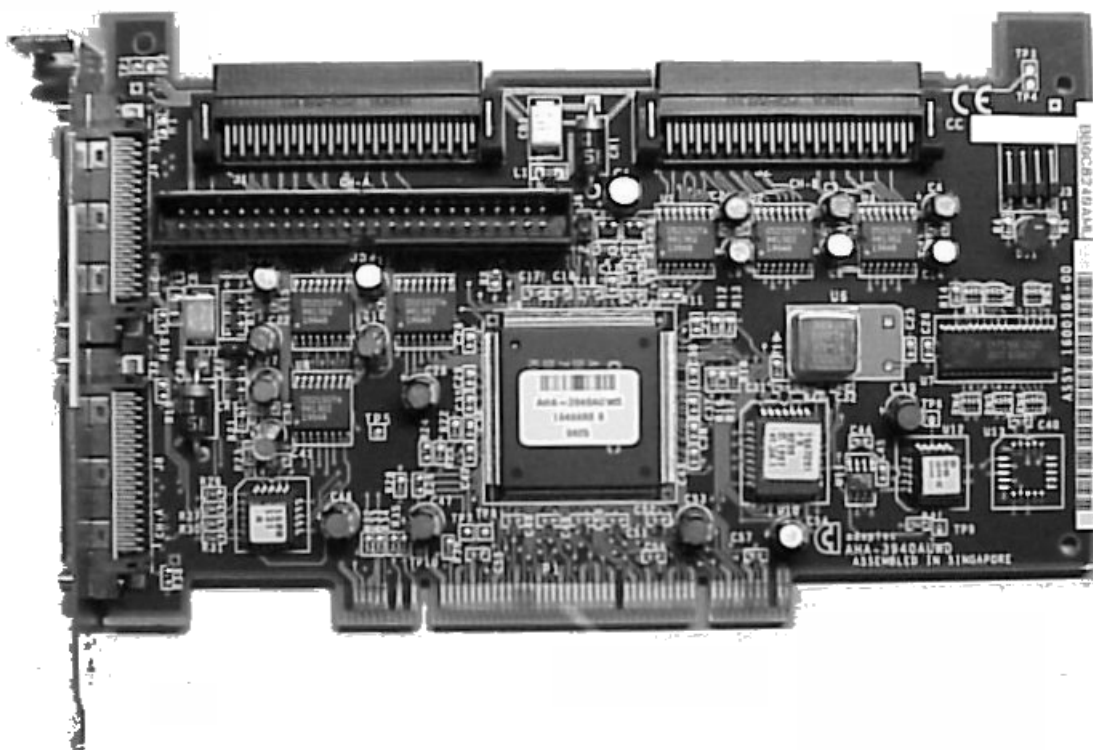

Adaptec AHA-3940AUW SCSI Adapter

5.10.1 Adaptec Option ROM Configuration

1. Power up the system.
2. Enter the Adaptec AHA-3940xxx adapter option ROM by holding the **Ctrl** plus the "**A**" key after it identifies itself on the display. This will occur after the internal Adaptec 7895 has scanned and reported drives on it's own channels.
3. The Adaptec option ROM screens are not mouse driven and must be navigated using the arrow keys.
4. Two channels 0A, and 0B will be displayed on the upper right hand section of the display, Choose the 0A channel first and review the parameter settings for each of the sections.
5. When all parameter changes are verified press **Esc** and choose **Yes** to return to the main screen.
6. Choose the 0B channel and review the parameter settings for each of the sections.
7. When all parameter changes are verified for channel press **Esc** and choose **Yes** to return to the main screen.
8. Press **Esc** and choose **Yes** to save the changes. Restart the system to complete the procedure.

5.10.2 Adaptec Option ROM Menus

All parameters should reflect the "**Recommended**" values in the charts below.

NOTE: All systems configured by Avid manufacturing will ship with the Maximum Sync Transfer Rate set to 20 MBytes/sec for each SCSI ID.

SCSI Bus Interface Definitions	Recommended
Host Adapter SCSI ID	7
SCSI Parity Checking	Enabled
Host Adapter SCSI Termination	Enabled

Boot Device Settings	Recommended
Boot Channel	A First
Boot SCSI ID	0
Boot LUN Number(**)	0

SCSI Device Configuration	Recommended
Initiate Sync Negotiation	Yes (Enabled)
Maximum Sync Transfer Rate	20 MBytes/sec
Enable Disconnection	Yes (Enabled)
Initiate Wide Negotiation	Yes (Enabled)
Send Start Unit Command	Yes (Enabled)
BIOS Multiple Lun Support	No (Disabled)
Include in BIOS Scan	Yes (Enabled)

Advanced Configuration Options	Recommended
Plug and Play SCAM Support	Disable
Reset SCSI Bus at IC Initialization	Enabled
Extended BIOS Translation for DOS Drives > 1 GB	Enabled
Host Adapter BIOS (Configuration Utility Reserves BIOS Space)	Enabled
Support Removable Disks under BIOS as Fixed Disks	Boot Only
Display <Ctrl-A> Message During BIOS Initialization	Enabled
BIOS Support for Bootable CD-ROM	Enabled
BIOS Support for Int 13h Extensions	Enabled

Notes:

1. Insure the correct parameters are configured for all devices on both SCSI channels.
2. Leave SCSI disconnects enabled unless there is a specific device that does not support disconnects.
3. The adapter must be configured to use the appropriate negotiation method for the all disks. Never set the adapter to use wide negotiation on narrow disks for example.
4. For each Avid IS9 Pro, or IS18 Pro, the synchronous transfer rate **must** be set to 20MB/s and the maximum number of drives allowed on each external SCSI chain is eight. This requirement is imposed due to performance instability when too many spindles are chained.

5.11 Avid Meridien Digital Media Board

The Avid Meridien Digital Media board is the video engine hardware required for Symphony and Xpress. Before installing the module insure the appropriate cables are available:

- Display Controller interconnect cable (Qty 1) Avid Part # 0070-00491-01
- 3D effects board interconnect cables (Qty 2) Avid Part # 0070-00435-01

If **not** installing a 3D effects board in the system the media board may be installed into the recommended PCI slot reflected in the board configuration charts.


If installing a 3D effects combination there are interconnection dependencies with the media board which require consideration. Before installing the media board in the system you should build the 3D combination and complete the cabling between the board set. Reference and complete the instructions in section 5.13 before installing the media module in the system.

Instructions to load or check device driver revisions are located in the **Windows NT Device Drivers** section of this document.



ESD

Caution: System components and modules are extremely sensitive to static electricity. Before handling any modules or components, follow proper electrostatic discharge (ESD) guidelines. Always wear a static strap!

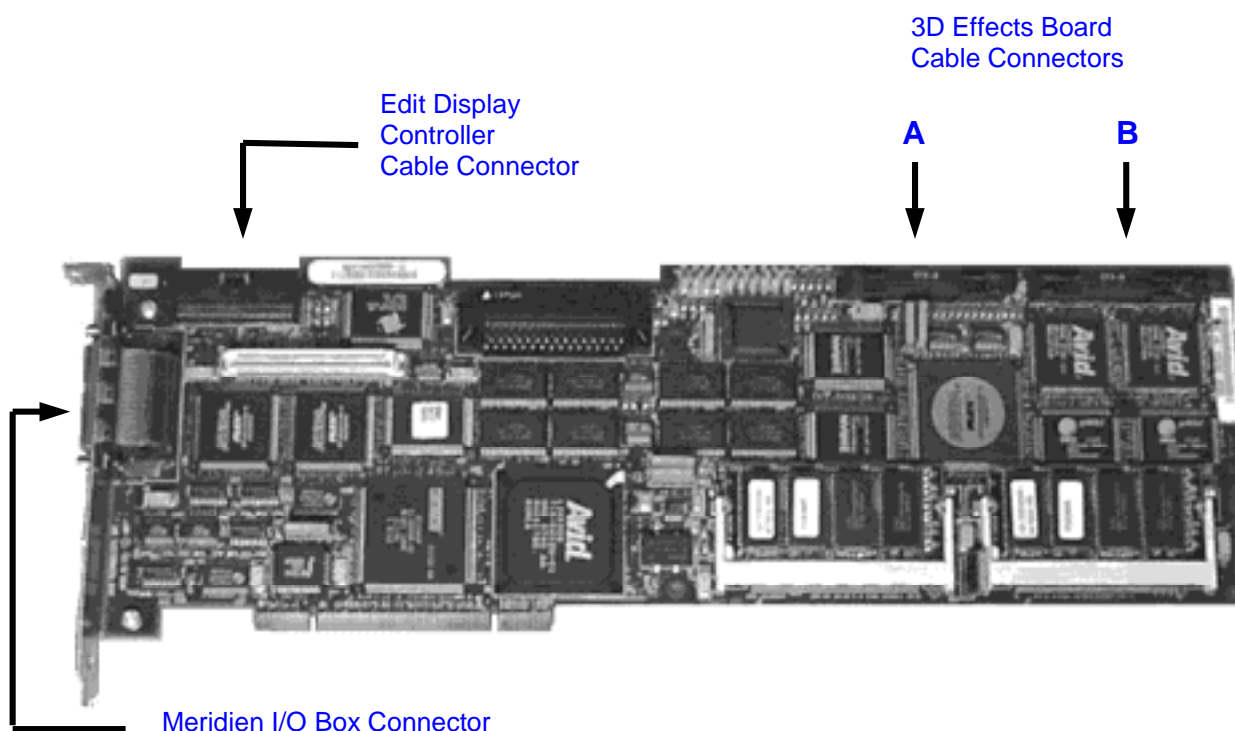

Avid Meridien Digital Media Board

5.12 Avid Meridien Display Controller (EDC)

The Avid Meridien Display controller board is often referred to as the Edit Display controller. The board is a standard dual-head graphics adapter built around two Number Nine Corporation Revolution 3D graphics controllers, and a special DMA pixel engine required for Avid applications. Install the display controller into the PCI slot recommended in the board configuration charts.

Attach one end of the cable to the display controller cable header and the other end to the Meridien Digital Media board. Each end of the cable is keyed to facilitate proper installation. Be careful to properly align the cable in the connectors, and do not force the connections.

The edit display controller supports two display monitors that should be the same size and vendor brand to minimize configuration difficulties. As of this writing the recommended monitor size is 17 or 21 inches and should be auto or multi-synchronous.


Monitor connections to the edit display controller are designated **Boot** for the primary VGA display, and **Edit** for the secondary display. Arrange your monitors so the **Boot** monitor is on the left.

Important: Remove the AGP Card from the system before installing the display controller board.



ESD

Caution: System components and modules are extremely sensitive to static electricity. Before handling any modules or components, follow proper electrostatic discharge (ESD) guidelines. Always wear a static strap!

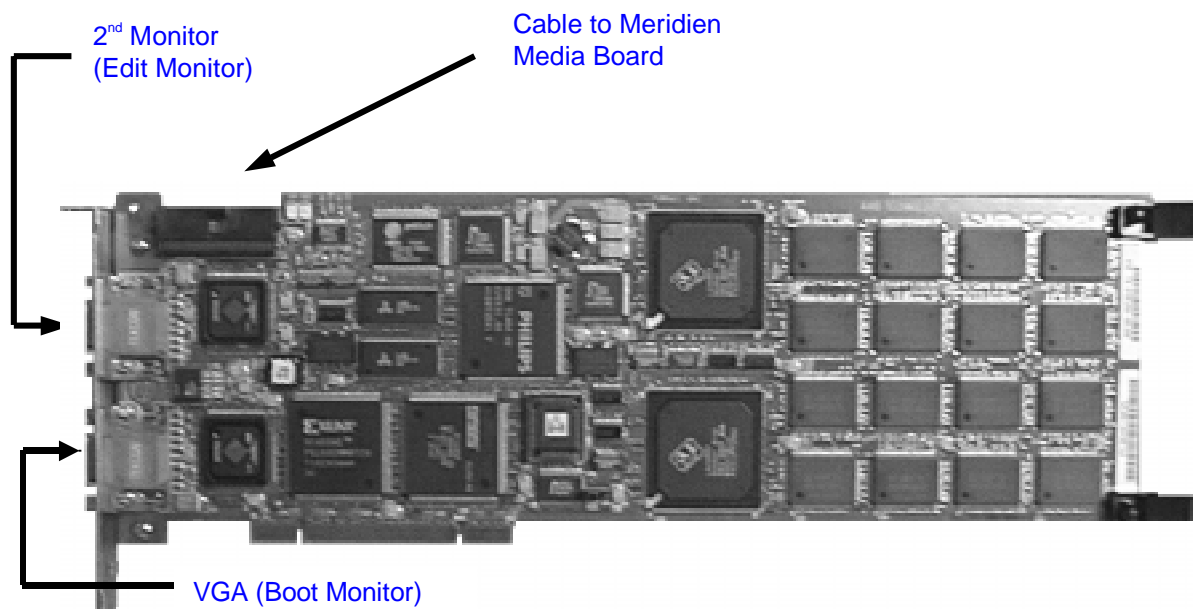


Avid Meridien Display Controller

5.13 Meridien 3D Effects Combination

The Meridien 3D effects board combination consists of Pinnacle Genie 3D DVE module with an Avid designed daughter card. The two boards are physically mated using plastic standoffs attached to the Avid daughter card and are shipped from the manufacturer as completed assembly to facilitate faster installation.

Two “over the top” connector boards nicknamed “Croc” and “Odile” ensure proper stability to the constructed board set as well as provide power and signal interfacing between the Genie and Avid daughter card. The “Croc” and “Odile” boards should be seated firmly onto each of the two boards in the effects board assembly. If they are loose, line up the connector boards and be very careful not to force them into their effects board connectors.

View from top of combined board set:

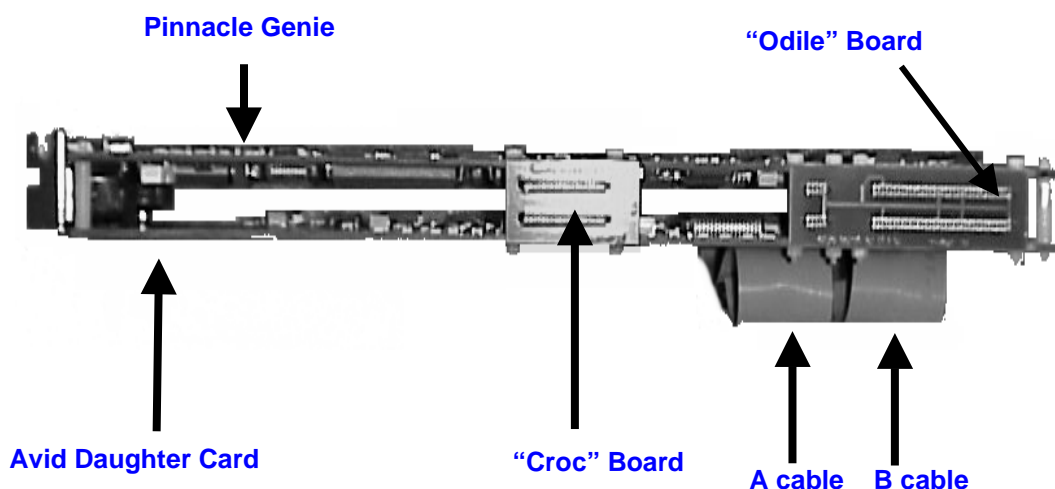

Route the two interconnect cables Avid Part # 0070-00435-01 from the Avid daughter board cable connectors to the Meridien digital media board. This is somewhat easier to do before the media board is installed in the system but is not required. Line up the cables and be very careful not to force the cables into their connectors.



ESD


Caution: System components and modules are extremely sensitive to static electricity. Before handling any modules or components, follow proper electrostatic discharge (ESD) guidelines. Always wear a static strap!

3D Effects Assembly

5.14 Connecting the Meridien I/O Box

Connect one end of the data cable to the “**M**” connector on the Meridien Digital Media board. Connect the other end of the cable to the breakout box connector designated “**System**”.

Note: Refer to the Avid Symphony or Xpress product documentation for more information.

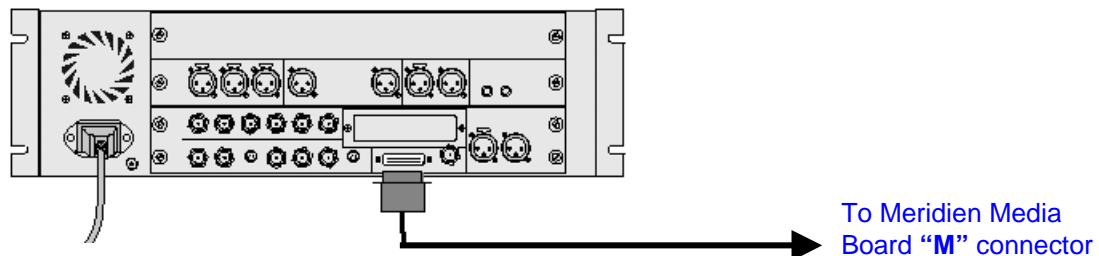

6. Windows NT Configuration

This section describes the Windows NT installation and configuration specifics for Avid NT products. Configuration instructions for device drivers are **not** included in this section. Refer to the **Windows NT Device Drivers** section of this guide.

All recommendations and procedures should be completed for best results.

6.1 Windows NT Workstation 4.0

Avid NT applications are currently compatible with Windows NT Workstation 4.0 only.

IBM pre-installs Windows NT Workstation 4.0 and Service Pack 4 on the system disk root partition. A CD-ROM distribution of Windows NT Workstation 4.0 is included with the system along with documentation and license information.

Recovery procedures are detailed later in this guide.

6.2 Windows NT Server

Windows NT Server 4.0 is not supported for use with Avid products.

6.3 Windows NT Workstation Installation

The following procedure is used to install Windows NT Workstation on your computer.

Pre-Installed Automated Procedure:

Pre-installed operating systems require the user to complete installation. Service packs and appropriate platform specific special files are already included on the system and will be installed as part of the procedure. You will not require additional files or media. Follow this procedure to supply the appropriate responses to the prompts. Time to complete this procedure is roughly fifteen minutes.

Manual Installation: If you are installing the operating system manually after replacing a hard disk or adding a parallel NT installation you will need the Windows NT Setup Diskettes 1-3 and a diskette containing the Adaptec 7800 Family Manager device drivers. This diskette can be created from another system using the IBM Ready to Configure CD-ROM. You will also require the Windows NT Workstation distribution CD-ROM and access to the appropriate Windows NT service pack media. Follow this procedure to supply the appropriate responses to the prompts.

1. If you are installing the operating system manually, insert Windows NT Setup Disk #1 in the diskette drive and the Windows NT distribution CD in the CD-ROM drive. Power on the system.
2. Windows NT setup will begin processing and you will receive the message "Setup is inspecting your computer."
3. Windows NT setup will examine your disk drives and start file copy operations. If you are installing the operating system using the Windows NT Setup diskettes, you will be asked to insert diskettes two and three during the process. When prompted to search for additional mass storage devices and controllers, choose "**S**" to specify additional devices. Highlight "**Other**" in the dialog box and choose "**Enter**". Insert the Adaptec 7800 Family Manager Set diskette in the A:\ drive and press Enter. This will load the correct SCSI device driver for your system.
4. The Windows NT setup program initializes and the End User License Agreement (EULA) is displayed. Choose "**I Agree**" to the EULA dialog.
5. The installation begins to copy files and will display the Windows NT Setup Wizard Dialog. Choose "**Next**" to continue.
6. Enter the following information for the Company Name and Organization:
Name: **Avid Technology**
Organization: **Avid Technology**
7. The product registration ID is requested. **Enter the Product ID as found on outside of the Windows NT distribution media CD-ROM and documentation.**
8. The installation will prompt for a **Computer Name**. Enter "**AvidTechnology**"
9. The installation will prompt for an **Administrator** account password. Click **Next**.
10. The dialog "Windows NT setup ready to guide you through NT Networking" will appear. Click **Next**.
11. Choose "**This computer will participate on a network**" and check the box "**Wired to a Network**".
12. To have the setup program search for a network adapter, click the "**Start Search**" button.
13. The system will identify the Intel Pro100 82557 network interface.
14. For network protocols choose **TCP/IP**, then click **NEXT** twice.
15. The properties of the Intel Pro100 are determined and displayed. Click **OK** to the 82557 properties.
16. The following dialog appears: "If there is a DHCP server on your network, TCP can be configured to dynamically provide an IP address. If you are not sure ask your system administrator. Do you wish to use DHCP?" Click **YES** to accept DHCP.
17. Click **NEXT** to start the network.
18. Do not change the Workgroup and Domain selections when asked. Click **Next** to continue.

19. Setup continues and will detect a 16 color VGA display. Click **OK** to accept this display.
20. Setup will continue to install and restart the system.
21. The manufacturer pre-installed automated installation procedure will continue with Service Pack 3 or 4 (depending on the age of the system) and Microsoft Internet Explorer. If you are installing Windows NT manually, continue after the restart and apply Service Pack 4 to the system. After the service pack application, you should follow the instructions in this section to install the Y2K compliant features.

6.4 Windows NT Service Packs

Microsoft periodically releases operating system patches and other fixes in the form of a Service Pack. In addition to problem corrections, these releases often contain new functionality or features that warrant testing by Avid for compatibility. Avid Systems Engineering maintains release information about the recommended service packs. It is recommended only those service packs and appropriate fix kits certified by Avid be used with our products.

Current compatibility and requirements:

Windows NT 4.0 Service Pack 4

Service packs may be downloaded directly from Microsoft's web site (www.microsoft.com). The releases tend to be very large and are difficult to download reliably with standard modems. Microsoft also sells the service packs on CD-ROM for a nominal charge.

IBM Intellistation systems have service pack 4 pre-installed. A copy of the service pack 4 files is included on the system disk **ISP4** directory, but no CD-ROM media is included. Customers are advised to create a backup of these files in the event the service pack needs to be reapplied. To check the service pack version on the system:

Open **My Computer**.

Choose **Help** and select **About Windows NT**

View the contents of the window for the following information:

Microsoft (R) Windows NT (R)
Version 4.0 (Build 1381, Service Pack 4)

6.5 Post-Service Pack Fixes

Occasionally Microsoft releases post-service pack fixes to address problems in specific areas of Windows NT. These releases also warrant certification by Avid before use with our products. These post-service pack releases sometimes have dependencies on other kits that may create confusion or improperly configured systems if exact installation instructions are not followed.

Avid Systems Engineering recommends installing post service pack fixes only to address site-specific problems or widespread critical problems.

Post service pack fixes may be downloaded from Microsoft's web site at www.microsoft.com.

6.6 Service Pack 4 Installation Procedure

This section describes the procedures necessary to update your system to service pack 4. IBM provides the service pack pre-installed in the directory C:\SP4. To re-install the service pack from this directory, follow the directions described in "Installing Service Pack 4 from CD-ROM" in this section.

6.6.1 Preparing to Install Service Pack 4

1. Inventory the non-Avid applications on your system. Determine if the applications require a maintenance update before installing the new service pack.
2. If Miramar PC-MacLAN is installed on your system, you must obtain a patch from Miramar before installing service pack 4.
3. Perform a full system backup of all files using your favorite backup application. Be sure to backup the NT registry!
4. Create an Emergency Repair Disk using `rdisk /s`.
5. Rename your current \$NtServicePackUninstall\$ directory in `<systemroot>\system32` to reflect the version of the files contained within the directory. For example, if you currently have service pack 3 installed rename the \$NtServicePackUninstall\$ directory to SP3 Original Uninstall. You can delete the files and directory after you are certain your system is operational following the new service pack installation.
6. Disable all non-essential third-party drivers, services, or startup applications. This includes utilities like anti-virus or disk defragmentation software.
7. Insure you have adequate space on your system disk (C:\) to permit installation of the new service pack. You will require 80MB free disk space to install the new service pack and allow for a service pack uninstall directory.

8. Use the Windows NT Explorer to copy the AIC78XX.SYS SCSI driver and E100BNT.SYS network driver from the [<%systemroot%\system32\drivers >](#) directory to the desktop. This driver may be necessary to complete the SP4 installation.

6.6.2 Installing Service Pack 4 from CD-ROM

1. Insert the Service Pack CD into your CD-ROM drive.
2. Avid ships systems with CD Autorun disabled so the Service Pack CD will not automatically start.
3. From My Computer or the Windows NT Explorer select the CD ROM drive.
4. Right-mouse click and choose Open from the menu.
5. Select Spsetup.bat and double-click to launch.
6. Check the box labeled "**Backup files necessary to uninstall this Service Pack at a later time**". To use the uninstall feature of this Service Pack, you must create an uninstall directory during the initial installation. Always do this!
7. Click the "Read Me" button to read the SP4 readme.txt file if desired.
8. Check the box labeled "**Accept license agreement**" and click the Install button to initiate installation.
9. Allow the service pack installation to progress. You are permitted to cancel the service pack installation only during the "Backup" phase of the operation.
10. The service pack installation program may detect an OEM driver version and may ask you if you want to replace the driver. This occurs when special device drivers are installed on a system that does not match the service pack setup list. **ALWAYS CLICK NO** to preserve the OEM driver.
11. When the installation is complete, you will receive a dialog box stating "Installation Complete. You must restart the system." **DO NOT restart the computer.**
12. On the IBM 6889 you must follow this procedure prior to restarting your computer. Use the Windows NT Explorer to copy the AIC78XX.SYS SCSI driver and E100BNT.SYS network driver from the desktop back to the [<%systemroot%\system32\drivers >](#) directory.
13. Restart the system.
14. After restarting the system, you will receive a dialog box that states:

To resolve known Windows NT 4.0 Year 2000 issues you must install the following versions (or greater) of the programs listed below:

*Microsoft Data Access Components 2.0 Service Pack 1
Microsoft Internet Explorer 4.01 Service Pack 1*

Would you like to view the Y2K.txt file to get more information about the locations of these products?

15. Choose NO.
16. If offered the choice to perform the installation now, start the installation of these components. If not offered the choice to perform the installation of the components, reference the Resolving Year 2000 Issues section of this document.

6.6.3 Installing Service Pack 4 from a Download

If you choose to download service pack 4 from Microsoft you will end up with a compressed executable file on your disk drive. To extract this file and begin the installation:

1. Open a command prompt window and type SP4I386.EXE or double-click the file from the Windows NT Explorer. Using a command prompt only you can also extract the file into the current directory without launching the installation program typing SP4I386 /x.
2. Execute **UPDATE.EXE** from the service pack \i386\Update directory.
3. Check the box labeled "Backup files necessary to uninstall this Service Pack at a later time". To use the uninstall feature of this Service Pack, you must create an uninstall directory during the initial installation.
4. Click the "Read Me" button to read the SP4 readme.txt file if desired.
5. Check the box labeled "**Accept license agreement**" and click the Install button to initiate installation.
6. Allow the service pack installation to progress. You are permitted to cancel the service pack installation only during the "Backup" phase of the operation.
7. The service pack installation program may detect an OEM driver version and may ask you if you want to replace the driver. This occurs when special device drivers are installed on a system that does not match the service pack setup list. **ALWAYS CLICK NO** to preserve the OEM driver.
8. When the installation is complete, you will receive a dialog box stating "Installation Complete. You must restart the system." **DO NOT restart the computer.**
9. On the IBM 6889 you must follow this procedure prior to restarting your computer. Use the Windows NT Explorer to copy the AIC78XX.SYS SCSI driver and E100BNT.SYS network driver from the desktop back to the <%systemroot%\system32\drivers > directory.
10. Restart the system.
11. After restarting the system, you will receive a dialog box that states:

To resolve known Windows NT 4.0 Year 2000 issues you must install the following versions (or greater) of the programs listed below:

Microsoft Data Access Components 2.0 Service Pack 1

Microsoft Internet Explorer 4.01 Service Pack 1

Would you like to view the Y2K.txt file to get more information about the locations of these products?

12. Choose NO.
13. If offered the choice to perform the installation now, start the installation of these components.
14. If not offered the choice to perform the installation of the components, reference the Resolving Year 2000 Issues section of this document.

6.6.4 Resolving Year 2000 Issues

Microsoft addressed seven known Y2K issues with the release of Service Pack 4. Applying Service Pack 4 will bring the Windows NT Workstation 4.0 operating system into Y2K compliance. However, the service pack fixes address the operating system only, and do not address compliance problems present in ancillary applications.

1. Upgrade these products individually from the following folders on the Service Pack 4 CD-ROM:
 - \Msie401 (for Microsoft Internet Explorer 4.01 Service Pack 1)
 - \Mdac (for Microsoft Data Access Components 2.0 Service Pack 1)
2. Run the Y2KSETUP.EXE program located in the \i386\Update directory on the service pack 4 CD-ROM or SP4 directory on your computer. This application automatically updates operating system components to resolve known Year 2000 issues. An uninstaller option is not available for Y2KSETUP.EXE.

Alternatively, download these products from:

<http://support.microsoft.com/support/downloads/>

Download the Year 2000 Service Pack (y2ksp4i.exe or y2ksp4a.exe) from one of the locations below to your computer:

<ftp://ftp.microsoft.com/bussys/winnt/winnt-public/fixes/>
<http://support.microsoft.com/support/ntserver/content/servicepacks/>
<http://support.microsoft.com/support/downloads/>

Run the self-extracting executable to expand the package.

6.6.5 Reapplying a Service Pack

Any time you install hardware or software on your computer that requires you to use files from the original Windows NT 4.0 CD-ROM distribution, you must re-apply the current service pack. The files included on the original Windows NT 4.0 distribution may not be the same revision as the files on the service pack.

If you re-install SP4 after installing new software or hardware, you must create a new service pack uninstall directory. To retain your ability to back out to a bootable configuration, copy the current Uninstall folder to a safe location before running the SP4 installation program.

6.6.6 Uninstalling a Service Pack

Under normal circumstances, you will not need to uninstall a service pack from your computer. However, in case this is required because of a problem, use the following procedure:

Note 1:

Any changes you made to the system registry after installation of the new service pack will be lost after uninstalling. Any software applications installed after the new service pack was applied will require re-installation after restoring the previous version service pack.

Note 2:

This procedure assumes you saved a service pack Uninstall directory when you applied the new service pack. If you do not have a service pack uninstall directory you cannot successfully remove the service pack on your system using this procedure. You must reinstall the previous service pack over the current version and force replacement of all files.

1. Log on to system using the Administrator account.
2. Using Windows NT Explorer verify you have the Service Pack Uninstall directory:
\\%systemroot%\\$NtServicePackUninstall\$spuninst\.
3. Open the Control Panels and run the Add/Remove Programs control panel.
4. Select Windows NT 4.0 Service Pack 4, and click the Remove button.
5. If Windows NT 4.0 Service Pack 4 is not available in the list of applications to remove, use the Windows NT Explorer to locate and double-click SPUNINST.EXE from the
\\%systemroot%\\$NtServicePackUninstall\$spuninst\ directory.
6. The current service pack will be removed and the previous version will be restored. Refer to Re-installing Service Pack 3 for restrictions and notes.
7. For an added measure of reliability, restore your system using the Emergency Repair Disk you created before installing the new service pack.

6.6.7 Copying SP4 to Disk

To facilitate faster access to service pack files when reapplication is needed, IBM supplies the latest Windows NT service pack distribution on the system disk. Normally IBM puts these files in C:\SP3.

After a successful update to service pack 4, you can remove the service pack 3 distribution files from your system. Create a backup of the directory C:\SP3 for safekeeping. Delete the SP3 directory when your backup is complete.

If you installed Service Pack 4 from a CD-ROM, copy the \I386 directory from the Service Pack 4 CD-ROM to C:\SP4. Also copy the CD directories \Msie401 (for Microsoft Internet Explorer 4.01 Service Pack 1) and \Mdac (for Microsoft Data Access Components 2.0 Service Pack 1) to C:\SP4.

If Service Pack 4 was applied via downloads, move the downloaded compressed images to C:\SP4.

6.6.8 Re-installing Service Pack 3

If you need to re-install Service Pack 3 after uninstalling Service Pack 4 follow this procedure:

SP4 modifies the Security Account Manager (SAM) and Security databases in the NT registry. Older versions of the files that reference or control these databases no longer recognize the database structure. When you uninstall SP4 the files that control the database are NOT removed. When you re-install SP3 you MUST answer NO when if the dialog "Confirm File Replace" is presented for any of the following files:

- Lsasrv.dll
- Msv1_0.dll
- Samlib.dll
- Samsrv.dll
- Services.exe
- Winlogon.exe

If you overwrite the newer files with the older versions on SP3, you will be unable to log on to the system.

If you uninstall SP4 on a system that previously had SP3 without Internet Explorer 4.0 installed, cryptography code will not work correctly after the SP4 uninstall completes. To correct the problem, reinstall SP3 after you have uninstalled SP4.

6.7 General Windows NT Setup

This section describes recommended general Windows NT Workstation configuration information.

6.7.1 Explorer View

To assist installation and configuration procedures, set the Windows NT Explorer view to display all files. To do this:

1. Choose the **View** menu from the NT Explorer
2. Select **Options**.
3. Click the **View** resource tab, and set the **Show all Files** button.
4. Clear the "**Hide file extensions for known file types**" box.
5. Click **OK** to complete the changes.

6.7.2 Screen Savers

Screen savers must be disabled to avoid interference during processor intensive operations such as exports or long rendering sessions. To do this:

1. Right mouse click on the desktop and select **Properties**. The **Display Control Panel** will appear.
2. Select the **Screen Saver** tab from the **Display Control Panel**.
3. Choose **None** under the Screen Saver box.
4. Click **Apply** and **OK** to commit the change.

6.7.3 Fonts

Use small screen fonts with the primary display driver to avoid missing characters in application dialog boxes or menus. Small fonts are the default with most display drivers and may be checked in the **Settings** tab in the **Display Control Panel**.

6.7.4 Environment Variables

The system must have a TEMP system environment variable set to allow for scratch pad activities by applications.

1. Open **Control Panels** and double click the **System** control panel.
2. Select the **Environment** tab.
3. Scroll through the **System Variables** section and check for a **TEMP** variable.
4. If a TEMP variable does not exist, create one in the **Variables** box, set the path to **%SystemDrive%**, and select **Set** to commit the change.
5. Insure a TEMP directory is present on the root drive C:

To create a temp directory:

1. Launch Windows NT Explorer.
2. Select **File** from the menu bar and choose **New Folder**
3. While the folder is highlighted type **Temp** and press **Enter**.

6.7.5 Applications Partition

A worthwhile practice is to install all applications and utilities on a partition other than the root system partition. This practice allows enough space on the system partition for application scratch files, temporary file growth, crash dumps, error logs, etc.

On the Intellistation the primary system root partition is defined as a 2GB NTFS or FAT partition. The disk has plenty of free space to create a second partition. You must use the Windows NT Disk Administrator to create and format a partition using the remaining space on the disk.

1. From the **Start Menu** go to **Programs** and **Administrative Tools** (Common).
2. Choose and launch the **Disk Administrator**
3. Locate the free space immediately following the root drive C:
4. Highlight the free space by single clicking.
5. Right mouse click and choose **Create**. Click **OK** and assign the logical drive partition size using the remaining space.
6. Assign the drive letter D: This may require reassigning the CDROM drive to letter E beforehand.

7. Commit the change.
8. Highlight the new partition, right mouse click and choose **Format**.
9. Check the "**Quick Format option**" and choose **NTFS** for the File System.
10. Leave the Allocation Unit Size at "**Default allocation unit**" and click **Start**.
11. Choose OK to begin formatting and acknowledge when complete.
12. Exit the Disk Administrator.

6.7.6 User Account Guidelines

Avid applications will work with non-privileged user accounts or privileged user accounts. Creating non-privileged user accounts allows the system administrator to control driver or application installations, system hardware configurations, and system security.

Since the administration of individual user accounts is site specific, Avid and its resellers will configure the system with two NT administrative privileged accounts for consistency, demonstration, and troubleshooting.

<u>Account Name</u>	<u>Password</u>	<u>Privileges</u>
Administrator	No password assigned	Administrator
AvidTechnology	No password assigned	Administrator

Each user account must have a home directory assigned to a local path directory on a partition other than the system partition. This reduces the user chances of accidentally filling the system partition with application data such as project files or bins.

1. If a **Users** directory does not exist, create a **Users** directory on the **D:** drive partition with the Windows NT Explorer or the command prompt MKDIR command.
2. Open **Administrative Tools** and choose **User Manager**.
3. Create a new user, for example, AvidTechnology by choosing the **User** menu and selecting **New User**. Fill in the fields for the new user account and click **OK**.
4. Double click the user account and select the **Profile** button.
5. Select the **Local Path** button under the **Home Directory** section and type in a path for the target directory. NT will create the directory if one does not exist. Examples:

d:\users\administrator
d:\users\avidtechnology
6. Click OK to complete the profile changes.
7. Click the Groups button to open the Groups Membership dialog.

8. Insure **Administrators** is selected from the “**Not member of**” column, and click the **Add** button to grant this group membership to the user account.
9. Click **OK** twice and select **Exit** from the **User** menu to complete the procedure.

6.7.7 Windows NT Registry Modifications

This section describes the recommended changes to the Windows NT registry

Important: Improper changes to the Windows NT Registry can render a system unusable so use caution when editing. If you are performing multiple changes to the registry it is not necessary to exit the editor after each change. Perform all the required changes and exit when complete. Changes to the Windows NT Registry become effective after a system restart.

6.7.7.1 KeyboardDataQueueSize

This parameter determines the size of the keyboard ring buffer. Some systems experience a buffer overflow condition during periods of peak activity or when the keyboard is extended by an un-buffered extension cable.

1. Invoke the Registry Editor (Regedt32.exe)
2. Locate and open **HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services** subtree.
3. Locate and open the **Kbdclass** key.
4. Select the **Parameters** key.
5. Select the **KeyboardDataQueueSize** value entry.
6. Change the value from 64 Hex to 128 Hex.
7. Choose “Close” to save the value.

6.7.7.2 MouseDataQueueSize

This parameter determines the size of the mouse ring buffer. Some systems experience a buffer overflow condition during periods of peak activity or when an un-buffered extension cable extends the keyboard.

1. Invoke the Registry Editor (Regedt32.exe)
2. Locate and open **HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services** subtree.

3. Locate and open the **Mouclass** key.
4. Select the **Parameters** key.
5. Select the **MouseDataQueueSize** value entry.
6. Change the value from 64 Hex to 128 Hex.
7. Choose "Close" to save the value.

6.7.7.3 CD Autorun

This parameter determines whether AUTORUN.EXE is automatically started when media is inserted into a CD-ROM drive. Autorun CD-ROMs cause applications to lose focus and should be disabled for normal operation.

1. Invoke the Registry Editor (Regedt32.exe)
2. Locate and open **HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services** subtree.
3. Locate and open the **Cdrom** key.
4. Select the **Autorun** value entry.
5. Change the value from 1 to 0.
6. Choose "Close" to save the value.

6.7.8 Serial Ports

To permit proper machine control operation in the Symphony and Xpress applications use the **Ports** Control Panel **Settings** button to set serial ports COM1 and COM2 to the following specifications:

Baud Rate : 38400
Data Bits : 8
Stop Bits : 1
Parity : None
Flow Control : None

6.7.9 Parallel Port

The parallel port must be enabled to allow the functionality of application key driver **Sentinel.sys**. Check the Sentinel for I386 device in the **Multimedia** Control Panel to verify the parallel port is functional.

1. Open the **Multimedia Control Panel**, then open the **Devices** tab.
2. Open the **Other Multimedia Devices** and look for the **Sentinel for I386 Systems** service.
3. Click on the **Settings** button. You should see information similar to the following:

Parallel Ports

Physical Address	Port Type	Bus #	Bus Type	Addr Space	DOS Addr	Use?	Created By
378	IBM AT	0	ISA	I/O	----	Yes	System

4. If the information does not appear correctly open the **Devices Control Panel**.
5. Scroll down the list of devices for the **Parport** and **Parallel** devices. Both should have a Status equal to **Started** and a Startup value of **Automatic**.

6.7.10 Dual Monitor Support

The Avid Edit Display Controller (EDC) supports a dual desktop display configuration. However, you must be aware of the following limitations:

- Windows NT dual monitor support is provided by a limited number of graphics board vendors. It is the device driver supplied by these vendors, in the EDC it's a Number Nine Corporation driver, and not the principle application that drives the display functionality.
- You must double the size of the horizontal display resolution using the control panels provided by the board manufacturer. For example, the suggested display resolution of 1024 x 768 must be doubled to 2048 x 768.
- Because the display driver treats both displays as one larger display, all Avid NT applications will exhibit the following behavior:
 1. The Windows NT log on dialog box will be centered across both monitors.
 2. Windows NT pop-up dialog boxes, error messages, and tool pop-ups will be centered between the two displays. You must drag these boxes onto one of the displays to view them properly.

6.8 Windows NT Error Handling

This section describes the recommended configuration of the Windows NT error handling and reporting facilities.

6.8.1 DRWATSN32.LOG

Windows NT maintains a separate log file for application errors called drwatsn32.log. By default this log file is created in the <systemroot> directory and may be used by software developers to determine the cause of application errors such as abnormal exits or access violations. The user or installer should not modify this log file.

6.8.2 NT Event Viewer Configuration

NT keeps three logs for **System**, **Security**, and **Application** events. These events may indicate error conditions, warnings, or simple informational status about the system. Events are viewed using the **Event Viewer** accessible through the **Administrative Tools** program group, or by running **eventvwr.exe**.

The EventLog service must be set to **Automatic** startup in the **Services** Control Panel.

For normal operation, Avid Systems Engineering recommends the following changes to the event log configuration:

1. Start **Event Viewer**
2. Select **Log** menu and choose **Log Settings**
3. Verify **Change Settings for System Log** is selected
4. Verify **Maximum Log Size** is set to 512KB
5. Click button for **Do Not Overwrite Events (Clear Log Manually)**
6. Select **Change Settings for Application Log**
7. Verify **Maximum Log Size** is set to 512KB
8. Click button for **Do Not Overwrite Events (Clear Log Manually)**

6.8.3 NT Crash Dump Recovery Configuration

The system must be configured to allow a complete memory dump store in the event of a Windows NT system crash.

1. Open the **System** control panel.
2. Select the **Startup/Shutdown** tab.
3. Under the **Recovery** section check the following boxes:

Write an event to the System log.

Write debugging information to **%SystemRoot%\MEMORY.DMP**

4. To make the changes effective you must restart the system. If you are performing other configuration work you can opt to dismiss the restart prompt.

6.9 Pagefile Configuration

When a process needs to use more memory than is available to it's working set, some memory blocks currently in use by the process must be out-placed to make room for the new data. This process is called paging and is handled by the memory management code within Windows NT. Memory blocks that cannot be paged to free memory pool areas must be paged out to a file on the disk called the pagefile.

The initial size of a pagefile is determined by the operating system and often proves to be improperly sized for normal operation. Windows NT will dynamically grow the pagefile when it requires more room to operate, but this dynamic expansion slows performance.

Windows NT paging performs best when multiple pagefiles are spread over multiple disk drives rather than a single drive. It is also better to move the pagefile off of the disk where the operating system files reside to reduce disk contention. However, since the end-user customer disk configuration is not known at the time the system is integrated, it is not possible to configure an external pagefile.

Systems are configured with a 300MB pagefile on the system disk. This will permit the capture of a Windows NT operating system crash and provide for sufficient expansion of the pagefile under most circumstances. If an additional pagefile is required for operation, it should be configured on the first striped set of disk drives.

Configuring the Pagefile

1. In **Control Panel**, double-click **System**.
2. Select the **Performance** tab.

3. Under the **Virtual Memory** section press the **Change** button.
4. The Virtual Memory dialog will display the number of drives attached to the system
5. Select drive C:
6. Select initial size to 300MB.
7. Select maximum size to 300MB.
8. When changes are complete, press the **Set** button.
9. To make the changes effective you must restart the system. If you are performing other configuration work you can opt to dismiss the restart prompt.

6.10 Windows NT HAL Replacement

When Windows NT 4.0 is installed on the IBM Intellistation it detects the APIC component on the system board and installs a corresponding Hardware Abstraction Layer (HAL) system file. Due to a problem with this file the Avid Meridien Digital Media Board device driver will not start successfully when service pack 3 is installed and a replacement HAL file must be installed manually.

Service pack 4 corrects the HAL problem with the Meridien Digital Media board. However, the APIC HAL normally installed with service pack 4 renders MIDI inoperable. Therefore, HAL replacement must be conducted to allow MIDI operations.

The HAL version must be examined when the following conditions are TRUE:

Avid media board hardware will be installed on the IBM Intellistation **AND**

- ⇒ On any IBM Intellistation with a pre-installed Windows NT operating system.
- ⇒ Any time the Windows NT operating system is re-installed.
- ⇒ Any time the Windows NT operating system is repaired.
- ⇒ After any installation of Windows NT Service Pack 3.
- ⇒ After installation of Windows NT Service Pack 4 if MIDI operation with the Crystal Audio CS4235 chip is required.

6.10.1 Determining the HAL Version

Use this procedure to determine the HAL on your computer system. You may use this procedure or may perform the rename/replacement using the Windows NT Explorer. However, if you use Explorer you will not see accurate file size information. You are encouraged to use the command window to avoid making errors.

1. Open an MS-DOS command window from the Start menu.
2. C:\> **cd %systemroot%\system32**
3. C:\> **dir hal.dll**

Examine the table and match the file date and size. Proceed with the instructions referenced in the required action column.

Date	Size	Name	Required Action
8/9/96	51,424 65,664	HAL.DLL	These HAL files must be replaced. Indicates there is no service pack on this system or the service pack revision is incorrect. Install service pack 3 before proceeding. See section on <i>Service Pack</i> installation.
12/14/96	51,488 65,664		
4/30/97	66,240	HAL.DLL	This HAL must be replaced. The system has service pack 3 installed and is at the minimum acceptable operating level, but the incorrect HAL is installed. Proceed with HAL replacement.
11/24/97	66,400	HAL.DLL	This HAL must be replaced. The system has service pack 3 and the pent-fix hotfix applied, and the incorrect HAL is installed. Proceed with HAL replacement.
4/30/97	51,744	HAL.DLL	This is the correct HAL for service pack 3. The system should be updated to service pack 4 as soon as possible.
10/15/98	66,880	HAL.DLL	This HAL must be replaced. The system has service pack 4 installed along with the default APIC HAL.
10/15/98	52,384	HAL.DLL	This is the correct HAL. The system has service pack 4 installed and is at the minimum acceptable operating level. No further action is required.

Another way to determine if the Hal must be replaced is:

1. Launch Windows NT Diagnostics from the Administrative Tools Group and select the Resources Tab.
2. Check the box labeled "Include HAL resources"

The device column should include entries with the description:

PC Compatible EISA/ISA HAL

You **must** replace the HAL if the device column includes entries with the description:

UP MPS 1.4 - APIC platform

6.10.2 Replacing the HAL

This procedure assumes the system has NT service pack 4 installed as per instructions in previous section. **You may use this procedure or may perform the rename/replacement using the Windows NT Explorer. However, if you use Explorer you will not see accurate file size information.** Since some HAL files have similar file sizes, you are encouraged to use the command prompt procedure.

1. Open an MS-DOS command window from the Start menu.
2. C:\> **cd %systemroot%\system32**
3. C:\> **dir hal.dll**
4. C:\> **ren HAL.DLL HALAPIC.DLL**
5. Insert Service Pack 4 in the CD-ROM drive, or reference another location for the service pack files. On the IBM Intellistation these files are located on the system disk (C:) in the directory \SP4.
6. C:\> **copy [drive letter]\i386\HAL.DLL %systemroot%\system32\HAL.DLL**
7. C:\> **dir hal.dll**

Expected results:

4/30/97	51,744 HAL.DLL	(This is the Service Pack 3 single processor HAL)
10/15/98	52,384 HAL.DLL	(This is the Service Pack 4 single processor HAL)

8. Changes become effective after the next system restart.

Important: If Service Packs 3 or 4 are re-installed for any reason the HAL replacement must be done again.

6.11 Hardware Profiles

Windows NT supports multiple hardware profiles as a means to selectively disable device drivers or services. Avid Systems Engineering recommends configuration of three hardware profiles for performance and troubleshooting procedures.

Original Configuration

This profile **omits only** Avid hardware devices (Meridien Digital Media and EditDMA) from operation. All other device drivers remain operable and enabled.

Avid Configuration (Network Enabled)

This is the normally used hardware profile and should include all Avid hardware devices and networking enabled.

Avid Configuration (Network Disabled)

This profile disables the network device driver only for configurations for digitize or print to tape operations.

Important: This procedure should not be implemented until all hardware, operating system, and applications configuration requirements are satisfied and verified functional.

1. Open the **System** Control Panel and select the **Hardware Profiles** tab.
2. Select the **Copy** button and rename **Original Configuration** to **Avid Configuration (Network Enabled)** and click OK.
3. Select the **Copy** button and rename **Original Configuration** to **Avid Configuration (Network Disabled)** and click OK.
4. Highlight **Avid Configuration (Network Enabled)** and press the up arrow to make it the default profile.
5. Highlight **Avid Configuration (Network Disabled)** profile and click the **Properties** button. Select the Network tab and check the box marked **Network-disabled hardware profile**.
6. Click **OK** to close, and **Apply** and **Close** to commit the changes.
7. Open the **Devices** Control Panel.
8. Scroll down the driver list until you get to APMEditDMA..
9. Select the **HW Profiles** button and highlight the **Original Configuration** hardware profile.
10. Press the **Disable** button, verify the change for the **Original Configuration** profile and click **OK**.
11. Scroll down the driver list until you get to APMPhxNTDriver device driver.
12. Select the **HW Profiles** button and highlight the **Original Configuration** hardware profile.
13. Press the **Disable** button, verify the change for the **Original Configuration** profile and click **OK**.
14. Procedure is complete.

6.12 Changing the Registered Owner

Before releasing the system to the end-user you must change the registered ownership information in the Windows NT Registry. This facilitates accurate ownership information within the system and is especially important for products whose installers hardcode against the fields in the NT Registry.

Use Regedit or Regedt32 to change the Windows NT registration information so it reflects the end-user customer and organization.

1. Invoke the Registry Editor (Regedt32.exe)
2. Locate and open:

HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows NT\CurrentVersion
3. Double click on the **RegisteredOrganization** field.
4. Modify the field to reflect the end-user organization name and click **OK**.
5. Double click on the **RegisteredOwner** field.
6. Modify the field to reflect the end-user owner name and click **OK**.
7. Choose "**Close**" to save the value.

7. Windows NT Device Drivers

This section describes the procedures necessary to check revisions, install, or update all Windows NT device drivers required by Avid NT products.

Avid Systems Engineering maintains support, revision, and performance information about all Windows NT device drivers. As updated drivers become available, we perform several tests to assess the impact on our products. For reliable performance, we recommend checking with us before installing new drivers from a vendor, even if the drivers were supplied with the product.

Before updating or installing device drivers it is a good idea to inventory the devices you will be configuring and collect the appropriate device drivers. IBM supplies drivers on their **Ready to Configure** CD-ROM that provides a convenient method of installing or creating driver diskettes. However, since driver revisions change routinely always check with Systems Engineering for the most appropriate revisions.

7.1 NT Device Drivers and Revisions Chart

Component	Driver Name	Device Controlled	Valid Versions	Notes
Adaptec 7800 Family Manager	AIC78XX.SYS	7895 3940	2.11, 2.2, 2.21	
Adaptec AIC-1160 Family PCI Fibre Channel	AIC116X.SYS	F940	1.2	JNI owns card/driver
Avid Edit Display Controller	AvidEDC.SYS Miniport Driver	Avid Display Controller EDC	4.113.30.10	On product CD
Avid EditDMA	APMEDITDMA.SYS	Avid Display Controller EDC	Application Specific	On product CD
Avid Meridien Digital Media	APMPHXNTDRIVER.SYS	Avid Meridien Digital Media	Application Specific	On product CD
Crystal Audio CS4235 Audio	CWBAUDIO.SYS	Sound Chip	4.01.1900	
Intel PIIX Bus Master	PIIXIDE.SYS	IDE Interface	2.03	
Intel Pro100B 82558 Network	E100BNT.SYS	82558 Network Interface	3.00.07, 3.19.00, 3.29.00	
Low Level MIDI Support	MMDRV.DLL	MIDI	4.00 Size = 16,656	Legacy HAL only
MPU-401 MIDI Driver	MPU401.SYS	MIDI	4.00 Size = 11,280	Legacy HAL only
Sentinel Driver	SENTINEL.SYS	Dongle	PD5.30	On product CD
Windows NT PIC HAL	HAL.DLL	NT Kernel	4/30/97 Size = 51,744 (SP3) 10/15/98 Size = 52,384 (SP4)	
Windows NT Service Pack 4	Required Hotfixes = None	NT Kernel		

7.2 MGACtrl Service

Systems normally ship with a Matrox AGP graphics card (Millenium II, G200). As Avid replaces the graphics card with the Meridien display controller, the Matrox MGACtrl service must be disabled after the Matrox card is removed.

1. Open the **Services** control panel.
2. Scroll down the list of services and single click to select the **MGACtrl** service.
3. Click the **Startup** button.
4. Under the **Startup Type** section set the radio button marked **Disabled**.
5. Click OK.
6. If the MGACtrl service is still started, click the **Stop** button.
7. Click **Close** to exit the control panel.
8. Changes will be effective after the next system reboot.

7.3 Adaptec SCSI Host Adapter

The Adaptec 7800 Family Manager Driver includes support for the following SCSI Host Adapters:

- AIC-7895 integrated dual channel
- AHA-2940UW, AHA-3940UW or AHA-3940AUW

DriverName: AIC78XX.SYS

IBM Intellistation M-Pro systems include an Adaptec 7895 dual channel SCSI controller chip on the system board. The 7895 is **NOT** supported by the Adaptec AIC78XX device driver included with the Windows NT Workstation 4.0 distribution or Windows NT Service Packs 3. With Windows NT Service Pack 4 the device driver is the wrong revision and must be replaced. An updated driver kit is necessary:

- To complete a new Windows NT installation when the target system drive is SCSI based.
- To enable support for this device with pre-installed NT systems where the adapter was not previously enabled.
- To enable this device after service pack re-installation or maintenance.

You can create the Adaptec Family Manager driver set by running the "Diskette Factory" on the IBM Ready to Configure CD-ROM.

7.3.1 Adaptec SCSI Driver Revision Verification

If the system has Windows NT pre-installed and an AIC78XX driver was installed, verify the Adaptec device driver is the proper revision:

1. Using Windows NT Explorer, open the `<systemroot>\system32\drivers` directory and locate **aic78xx.sys**. Insure the NT Explorer options are set to display all files as noted in the **Windows NT Configuration General Setup** instructions in this document.
2. If the driver is not present it must be installed.
3. Right mouse click the file and select **Properties** from the menu.
4. Choose the **Version** tab and verify the **File Version** reflects a version in the driver revision chart.
5. If the version is not correct, the driver must be updated.

7.3.2 Installing or Updating the Adaptec SCSI Device Driver

If the ADAPTEC SCSI device driver is not the correct revision or is missing from the system, this procedure should be followed to update the driver.

1. Open the **Control Panels** and double-click on **SCSI** Adapters.
2. Select the **Drivers** tab, and check for an existing Adaptec AHA-294X/AHA-394X or AIC-78XX PCI SCSI driver.
3. If the driver is not present skip to step 5. Otherwise, select the driver and click the **Remove** button.
4. Choose **Yes** to the **"Are you sure you want to remove this driver"** dialog.
5. Choose the **Add** button.
6. In the **Install Driver** window, click the **Have Disk** button.
7. Insert the Adaptec 7800 Family Manager Driver diskette or point to the appropriate path where the drivers are located.
8. At the **Copy manufacturer's files from** box, type **a:\winnt\4_0** for diskette or point to the appropriate path and click OK.
9. At the **Install Driver** window click OK.
10. Respond to **"Do you want to use the currently installed driver(s) or install new one(s)"**, by selecting the **New** button.
11. Type **a:\winnt\4_0** or point to the appropriate path and click continue.

12. The driver installation is complete and the system must be restarted to take effect. Click **Yes** to restart the system.

7.4 Adaptec Fibre Channel Adapter

The Adaptec AIC-1160 Family PCI Fibre Channel Device Driver kit includes support for the following Fibre Channel Adapters:

- AHA-F940 and AHA-F950

DriverName: AIC116X.SYS

Fibre channel drivers are not included with the Windows NT Workstation 4.0 distribution or Windows NT Service Packs and must be installed separately.

7.4.1 Adaptec Fibre Channel Driver Revision Verification

If the system has a previously installed version of the AIC-1160 driver verify the revision:

1. Using Windows NT Explorer, open the `<systemroot>\system32\drivers` directory and locate ***aic116x.sys***. Insure the NT Explorer options are set to display all files as noted in the **Windows NT Configuration General Setup** instructions in this document.
2. If the driver is not present it must be installed.
3. Right mouse click the file and select ***Properties*** from the menu.
4. Choose the ***Version*** tab and verify the ***File Version*** reflects a version in the driver revision chart.
5. If the version is not correct the driver must be updated.

7.4.2 Updating or Installing the Adaptec Fibre Channel Driver

If the Adaptec Fibre Channel device driver is not the correct revision or is missing from the system this procedure should be followed to update the driver.

1. Open the ***Control Panels*** and double-click on ***SCSI*** Adapters.
2. Select the ***Drivers*** tab, and check for an existing Adaptec AIC-1160 Family PCI Fibre Channel Adapters (SCSI) driver.
3. If the driver is not present skip to step 5. Otherwise, select the driver and click the ***Remove*** button.

4. Choose Yes to the "**Are you sure you want to remove this driver**" dialog.
5. Choose the **Add** button.
6. In the **Install Driver** window, click the **Have Disk** button.
7. Insert the Adaptec AIC-1160 Family Driver diskette or use the browse button to locate the path containing the necessary files.
8. At the **Copy manufacturer's files from** box, type the path containing the necessary files.
9. Click OK.
10. At the **Install Driver** window click OK.
11. Respond to "**Do you want to use the currently installed driver(s) or install new one(s)**", by selecting the **New** button.
12. Type the path containing the necessary files and click continue.
13. The driver installation is complete and the system must be restarted to take effect. Click **Yes** to restart the system.

7.5 Avid Meridien Digital Media Board Driver

The Avid Meridien Digital Media board device driver is an integral part of the Symphony, and XpressNT applications and is installed during setup. The device driver is registered in the System startup group.

Driver Name: APMPHXNTDRIVER.SYS

APMPHXNTDRIVER.SYS will be copied to the <systemroot>\system32\drivers directory.

Supporting files will be copied to the <systemroot> \system32\drivers\Avid directory.

Refer to this procedure to check the status of the driver:

1. Open the **Devices** control panel.
2. Single click to select the **APMPHXDriver**.
3. Check the **Status** column for a device status of **Started**. This indicates that driver loaded and initialized properly. Check the **Troubleshooting** section of this document for suggestions to correct any problems.
4. Click the **Startup** button.
5. Under the **Startup Type** section insure that the radio button marked **System** is checked.
6. Click the **Cancel** button.
7. Click **Close** to exit the control panel.

Important: The executable needs to be matched with the correct version of the driver. If you have a version mismatch you will see an error message when you launch the application or board diagnostics.

7.6 Avid Edit Display Controller

The Avid Edit Display Controller (EDC) is built around two Number Nine 3D Revolution graphics chips which provide support for two display monitors, and a digital encoder/decoder device for on screen motion video. Two Windows NT drivers are required to support these features.

AvidEDC Number Nine Display Driver
AVIDEDCD.DLL

Driver Name: AVIDEDC.SYS,

Avid EditDMA driver

Driver Name: AVIDEDITDMA.SYS

The Symphony or Xpress NT installer programs install the Avid EditDMA device driver.

The Avid Edit Display controller driver files are copied to disk by the Symphony or Xpress NT installer programs but the driver is **not** installed. Use the Number Nine Display Driver installation procedure to install the device driver.

7.6.1 Number Nine Display Device Driver

Use this procedure to install and activate the Avid Edit Display Controller (EDC).

AvidEDC Number Nine Display Driver
AVIDEDCD.DLL

Driver Name: AVIDEDC.SYS,

1. Boot the system in VGA mode by choosing **the Windows NT Workstation Version 4.00 [VGA Mode]** selection from the NT boot menu. The system will boot into 16-color mode at 640 x 480 resolution.
2. Right mouse click on the desktop, and select **Properties**. This will bring up the **Display Properties** dialog.
3. Click the **Settings** resource tab.
4. Type the letter 'T' on the keyboard or click the **Display Type** button to bring up the **Display Type** dialog.
5. Type the letter 'C' on the keyboard or click the **Change** button to bring up the **Change Display** Dialog.

6. Type the letter 'H' on the keyboard or click the **Have Disk** button to bring up the **Install From Disk** dialog.
7. Type in the path to the Number Nine display driver files. For example, **D:\Avid\EDCInstall** and click OK.
8. Click OK for the next dialog box to bring up the **Third-party Drivers** dialog.
9. The **Avid EDC Display Controller** will appear as a third party choice.
10. Click **Yes** button to accept the Avid EDC selection.
11. Click the Cancel button to close the **Display Type** dialog.
12. Click the **OK** button to close the **Display Properties** box. This will bring up a dialog instructing you to restart the system. Choose **Yes** to initiate a system shutdown.
13. **Allow the system to restart normally.**
14. Upon log in Windows NT will open the Display Control Panel automatically.
15. For single monitor systems only open the **Avid EDC Display Control Center** control panel. Click the **Desktop** tab and select the **Normal Mode** button.
16. Click the **Settings** tab and select **True Color** on the **Color Palette** menu.
17. Set the refresh rate is set to 75 Hz or above.
18. Set the Desktop Area slider to 2048 x 768 for two monitor systems and 1024 x 768 for single monitor systems. Other resolutions are available but should be left to the end user.
19. Click the **Test** button and the system will display the resolution chosen. Click **Close** to apply.

7.6.2 Avid Edit DMA Device Driver

The Avid EditDMA device driver is an integral part of the Symphony and XpressNT applications and is installed during the setup of these applications. The device driver is registered in the Automatic startup group.

Driver Name: APMEDITDMA.SYS

APMEDITDMA.SYS is copied to the [<systemroot>\system32\drivers](#) directory.

Refer to this procedure to check the status of the driver:

1. Open the **Devices** control panel.
2. Single click to select the **APMEDITDMA** driver.

3. Check the **Status** column for a device status of **Started**. This indicates that driver loaded and initialized properly. Check the **Troubleshooting** section of this document for suggestions to correct any problems.
4. Click the **Startup** button.
5. Under the **Startup Type** section insure that the radio button marked **Automatic** is checked.
6. Click the **Cancel** button.
7. Click **Close** to exit the control panel.

Important: The Edit DMA device driver requires a clock from the Meridien Digital Media board. The cable between the Meridien Digital Media board and the Meridien Display Controller must be attached.

7.7 Crystal CS4235 Audio Driver

The Crystal Audio CS4235 sound chip permits business audio support with the IBM. The MIDI port drivers must be configured to permit the use of fader accessories for MIDI automation gain recording. You can create the Crystal Audio driver set by running the "Diskette Factory" on the IBM Ready to Configure CD-ROM.

DriverName: CWBAUDIO.SYS

Use the following procedures when working with the Crystal Audio sound chip.

7.7.1 Crystal CS4235 Audio Sound Driver Revision Verification

1. Open the **Multimedia** Control Panel and select the **Devices** tab.
2. Click the "+" box to the left of **Audio Devices** to expand the display. **Audio for CrystalWare Audio Driver** should appear. If it does not appear, the driver is either not present or started.
3. Select the **Audio for CrystalWare Audio Driver** and press the Properties button.

Choose **Settings** and look for the **Copyright** information. The version number next to **CWBAUDIO** should reflect one of the versions on the device driver revision chart.

7.7.2 Installing or Updating the Crystal Audio Driver

1. Open the **Multimedia** Control Panel.

2. Click on the **Devices** resource tab and the **Multimedia Properties** windows will open. Select the **Add** button.
3. Select **Unlisted** or **Updated Drivers** and press **OK**. A dialog box will appear requesting the source path of the drivers to be installed. Either type a specific path or use the browse button to locate the appropriate location of the drivers. For example if you are using the IBM RTC CD-ROM the path would be [\[cd drive\]\winnt\crywntus](#).
4. Press OK to select the **CrystalWare Audio Driver**. Windows NT may report one or more drivers already present in the system. Select the **New** button to ensure a complete installation.
5. The CrystalWare Configuration Panel will be displayed during the installation. This panel will display the resources allocated to the device. These resources are not modifiable.

Default Resources:

Device	IRQ	DMA Channels
WSS	5	1 (Play), 3 (Capture)

6. After completing the driver installation, the system will require a restart.

7.7.3 Installing the MIDI Driver

The current implementation of MIDI support on the IBM 6889 requires that the **MPU-401** compatible driver be installed at IRQ 9. The **MPU-401** driver will not function at any other IRQ. Also, because the audio chip on the system board is an ISA device, the interrupt resource is not shareable with other devices in the system.

Along with the MPU-401 driver is another driver called “**Low Level Wave, MIDI and AUX Support**”. Both of these drivers are required for MIDI support.

Note 1: The system BIOS level needs to be at level 27 or higher.

Important: Because of the specific resource requirement, the MIDI drivers must be installed BEFORE any other device drivers or hardware. If MIDI installation is attempted after other hardware has been installed or after a board swap or upgrade, the IRQ 9 resource may be lost. Refer to the **Troubleshooting** section of this document for recommendations if you cannot free IRQ 9.

Procedure:

1. Insure you have access to the Windows NT service pack 3 (SP3) distribution disk. On most IBM systems there is an \I386 directory on the C drive that contains the service pack distribution.

2. Launch **Windows NT Diagnostics** from the **Administrative Tools** program group and select the resource tab.
3. Inspect the resource map and look for any device already using IRQ 9. If a device has claimed IRQ 9 you must refer to the **Troubleshooting** section of this document.
4. Open the **Multimedia** Control Panel and select the **Devices** tab.
 5. Click the "+" box to the left of MIDI Devices and Instruments to expand the display.
 6. Select the Add button at the bottom of the window.
7. Scroll down the list, select the MPU-401 Compatible Driver and click OK.
8. A dialog box will appear asking for the location of the driver. Type in the path where the driver is located. This can be the C:\I386 directory or from an SP3 distribution disk.
9. On occasion a dialog may come up informing that the driver is on the system and allows selection of either **Current** or **New**. Always select **New**.
10. Once the driver attempts to load another dialog will appear asking you to select an IRQ and base address. When this is shown select IRQ 2/9 and a Base I/O of 330. The base address can be something else but this should work. Do not use any other IRQ setting, as MIDI will only function at IRQ 9!
11. After this driver is installed, the system will prompt you to restart, select "**Don't Restart Now**"
12. Repeat step 6 but when the list appears again select the **Low Level Wave, MIDI and AUX Support** driver.
13. Again you will be prompted for a location and possible dialog of Current / New. Select **New**.
14. Once the driver is installed you will be asked to restart. At this time restart the machine.
15. After the system restarts, log on to NT and launch **Windows NT Diagnostics** again.
16. Open the resources tab and insure that the MPU-401 driver is at IRQ 9. If this is the case you can shut down the machine and continue with system integration. The IRQ resource should be locked down at this point.

7.8 Intel PIIX IDE Bus Master Drivers

Most Avid systems use a SCSI system disk over IDE disk drives. However, if the system uses an IDE system disk drive, the standard Windows NT device ATAPI driver must be replaced in favor of a Bus Mastering device driver. The driver provides more efficient controller functionality. If you are not certain of the system disk type, check the **System Summary** section of the system BIOS to verify the drive type.

IDE Bus Mastering drivers are dependent on the PIIX component of the system chip set and the system board vendor. Never use a generic driver unless explicitly instructed to do so.

DriverName: PIIXIDE.SYS

7.8.1 IDE Bus Master Driver Revision Verification

If Windows NT was pre-installed and a PIIXIDE.SYS driver was installed, verify the device driver is the proper revision:

1. Using Windows NT Explorer, open the `<systemroot>\system32\drivers` directory and locate **piixide.sys**. Insure the Explorer options are set to display all files as noted in the **Windows NT Configuration General Setup** instructions in this document.
2. If the driver is not present it must be installed.
3. Right mouse click the file and select **Properties** from the menu.
4. Choose the **Version** tab and verify the **File Version** reflects a version in the driver revision chart.
5. If the version is not correct, the drivers must be updated.

7.8.2 Updating or Installing the IDE Bus Master Device Driver

If the Intel PIIX PCI Bus Master IDE controller device driver is not the correct revision or is missing from the system this procedure should be followed to update the driver.

1. Open the **Control Panels** and double-click on **SCSI Adapters**.
2. Select the **Drivers** tab, and check for an existing **Intel PIIX PCI Bus Master IDE Controller** driver or the default IDE driver, **IDE CD-ROM (Atapi 1.2) / Dual-Channel PCI IDE Controller**.
3. If either driver is present select the driver and click the **Remove** button. Be sure to remove BOTH drivers if present.

4. Choose **Yes** to the “**Are you sure you want to remove this driver**” dialog.
5. Choose the **Add** button.
6. In the **Install Driver** window, click the **Have Disk** button.
7. Provide the appropriate path to the PIIXIDE driver directory. (This will either be a diskette or disk directory).
8. At the **Copy manufacturer's files from** box, type the correct path or browse for the correct directory and click OK.
9. At the **Install Driver** window click OK.
10. Respond to “**Do you want to use the currently installed driver(s) or install new one(s)**”, by selecting the **New** button.
11. Type the correct path and click continue.
12. The driver installation is complete and the system must be restarted to take effect. Click **Yes** to restart the system.
13. When the system has restarted verify the driver loaded and started successfully by entering **SCSI Adapters** Control Panel. The **Intel PIIX PCI Bus Master IDE Controller** should be listed. The default driver **IDE CD-ROM (Atapi 1.2) / Dual-Channel PCI IDE Controller** should **not** be listed.

7.9 Intel EtherExpress Pro100 Network Interface

The system uses an Intel Pro/100B embedded network interface. This interface requires a driver that is not present on the Windows NT 4.0 distribution CD-ROM or Service Pack 3. The correct drivers are available on the IBM Ready to Configure (RTC) CD-ROM supplied with the system or from Avid Systems Engineering. Use the menu driven interface on the RTC CD-ROM to create a diskette of the driver installation kit.

DriverName: E100BNT.SYS

Important: The EtherExpress Pro100B is based on the Intel 82558 chip. This interface is a replacement for the Intel 82557. It is not the same as the Intel 82557-based 10/100 Ethernet PCI interface available as an option during Windows NT 4.0 network software installation. If the interface is improperly specified during default Windows NT installation it will NOT function although the drivers will display no indication of error during installation of networking.

Follow the instructions in this guide for updating or installing the network interface driver to avoid problems.

7.9.1 Network Interface Driver Revision Verification

If the system has a previously installed version of the EtherExpress Pro100B driver verify the revision:

1. Using Windows NT Explorer, open the <systemroot>\system32\drivers directory and locate **E100BNT.SYS**. Insure the explorer options are set to display all files as noted in the **Windows NT Configuration General Setup** instructions in this document.
2. If the driver is not present it must be installed.
3. Right mouse click the file and select **Properties** from the menu.
4. Choose the **Version** tab and verify the **File Version** reflects one of the versions in the driver chart.
5. If the version is not correct, the driver must be updated.

7.9.2 Updating or Installing the Network Interface Device Driver

1. Open the **Network Control Panel** and choose the **Adapters** tab.
2. If updating the driver from a previous revision press the **Update** button and skip to step 4.
3. Select the **Add** button. The Select Network Adapter dialog box will appear along with a list of adapters. Do not use the adapters from this list. Instead, select the **Have Disk** button.
4. A dialog box will appear requesting the source path of the drivers to be installed. Either type a specific path or use the browse button to locate the appropriate location of the drivers.
5. A dialog box will appear with the **Intel EtherExpress Pro Adapter**. Press **OK** to initiate the installation.
6. Choose the **Close** button to finalize the installation.
7. Restart the system.

7.10 Pinnacle 3D DVE Genie Driver

The Pinnacle Genie device driver is an integral part of the Symphony application and Xpress NT when this 3D DVE effects option is purchased. The driver is installed during setup of these applications.

Driver Name: PGenie.sys
Supporting File: VIPR0201.abf

Installed driver location: [\winnt\system32\drivers](#) and [\winnt\system32\drivers\avid](#)

- PGenie.sys will be copied to the [<systemroot>\system32\drivers](#) directory.
- VIPR0201.abf will be copied to the [<systemroot> \system32\drivers\Avid](#) directory.

Refer to this procedure to check the status of the driver:

1. Open the **Devices** control panel.
2. Single click to select the **PGenie** driver.
3. Check the **Status** column for a device status of **Started**. This indicates that driver loaded and initialized properly. Check the **Troubleshooting** section of this document for suggestions to correct any problems.
4. Click the **Startup** button.
5. Under the **Startup Type** section insure that the radio button marked **Automatic** is checked.
6. Click the **Cancel** button.
7. Click **Close** to exit the control panel.

Tip: When the Genie device driver initializes during system startup you will hear the tune “Do Re Me”.

7.11 Sentinel Driver

The Sentinel driver is necessary to support the application key on the parallel port. The appropriate version of the Sentinel device driver software is included with the Symphony and Xpress product CD-ROMS and is installed by the application installer

DriverName: SENTINEL.SYS

7.11.1 Sentinel Driver Revision Verification

To verify the Sentinel device driver is the proper revision:

1. Using Windows NT Explorer, open the [<systemroot>\system32\drivers](#) directory and locate **sentinel.sys**. Insure the Explorer options are set to display all files as noted in the **Windows NT Configuration General Setup** instructions in this document.
2. If the driver is not present it must be installed.

3. Right mouse click the file and select **Properties** from the menu.
4. Choose the **Version** tab and verify the **File Version** is reflected on the driver chart.
5. If the version is not correct, the drivers must be updated.
6. If the driver does not appear reference the **Troubleshooting** section of this document.

7.12 VTR Serial Driver

To control Avid products from a Sony VTR a specialized serial device driver is required. The driver is not routinely installed with the NewsCutter product. To install the driver, manually copy **Serial.sys** from the **Avid Applications\Drivers\SerialDriver** directory into the **<systemroot>\system32\drivers** directory and reboot the system to activate.

The version information remains the same as the default Windows NT driver (4.0).

8. Windows NT Networking

8.1 Networking DHCP

Avid systems are configured to support networking. Since network protocol and configuration requirements are site-specific, it is not possible to configure a system that will match the needs of every end-user. Thus, out of box protocol integration will be limited to TCP/IP configured to support Dynamic Host Control Protocol (DHCP).

- **End-users are advised to review their networking requirements before system installation.**
- **End-users must change the system identification and networking configuration to reflect site requirements.**

During out of box Windows NT installation the system requires the installer to decide if the computer will participate on a network. A series of questions prompt the installer for the type of network interface, and what default protocols are required.

Default selections chosen by Avid during system integration:

1. **Computer Name** – Set the system name to reflect “**AvidTechnology**”
2. **Network Adapter** - Choose the Search function and it will identify the Intel Pro100 82557
3. **Protocols** - Choose only TCP/IP
4. **TCP/IP Configuration** - Choose and configure for DHCP only. Do not change the Workgroup and Domain selections.

8.2 Networking and Final Integration

Before completing integration and installing the system at a customer location, you should discuss the customer networking environment and requirements. Site requirements may necessitate changes to the Windows NT configuration as shipped.

Determine what additional protocols the customer will require. Additional protocols will access to the Windows NT Distribution CD-ROM and re-application of Service Pack 4 on the system.

Determine what the customer computer name and IP parameters will be in advance.

The networking adapter device driver may require updating after the appropriate service pack is installed. You must have access to the device driver diskette or have the IBM Ready to Configure disk available to create a driver diskette.

8.3 Computer Browser Service

The Browser Service must be disabled for in-house and shipping systems.

9. Open the **Services** control panel.
10. Single click to select the **Computer Browser** service.
11. Click the **Startup** button.
12. Under the **Startup Type** section set the radio button marked **Disabled**.
13. Click OK.
14. If the Computer Browser service is still started, click the **Stop** button.
15. Click **Close** to exit the control panel.
16. Changes will be effective after the next system reboot.

9. Windows NT Maintenance and Recovery

This section describes routine maintenance and restoration procedures for Windows NT installations.

9.1 Windows NT Repair Disk

The Windows NT Repair disk is vital to successful restoration of a user system in the event of a damaged operating system component. The Emergency Repair Disk (ERD) as it sometimes called should be updated any time a change to the operating system has occurred. This can happen whenever hardware is added or applications have been installed. The ERD is also used to replace damaged system files, restore damaged or incorrect registry information, or rebuild the system startup environment.

The repair disk does not restore applications or device drivers. Instead it holds copies of the user environment, software associations, passwords, and information about the system configuration. The ERD is not a replacement for regular backups. It provides enough recovery to restore a system to a bootable state only.

Creating or maintaining repair information is accomplished by the RDISK application included with Windows NT Workstation. RDISK may be used to update the repair information stored in the Winnt\Repair folder or to copy the information to an Emergency Repair Disk.

To create an Emergency Repair Disk:

1. Open MS-DOS command window or select the **Run** command from the **Start** menu.
2. Type **rdisk /s**.

Note: If you use the Windows NT Explorer to execute **rdisk** you will not update the Default, Sam, and Security configuration files.
3. The application will report progress as it saves the system configuration.
4. You will be asked to create an Emergency Repair Disk. Click the **Yes** button.
5. You will be instructed to put a high-density diskette (2.0MB HD DS) in the diskette drive. The application will format the disk for you. Click **OK** to start the process.
6. Appropriate configuration files will be saved to the disk and finally a notice about the sensitivity of the data will be presented. Click the **OK** button to complete the procedure.
7. Close the command window if open.

Important: Your system is shipped with two Emergency Repair Disks.

Factory Default ERD - This disk should be created and stored as means to bring the system back to a baseline default configuration in the event of a complete Windows NT rebuild. Create this disk after all of the following conditions have been satisfied:

- Windows NT is successfully installed along with the appropriate service packs and post service pack fixes.
- All platform vendor default hardware components and device drivers have been installed and successfully configured. This includes the networking and MIDI resource drivers but does not include optional disk controllers such as Fibre Channel.

AVID Operational ERD - is created after all Avid recommended hardware, drivers, and applications were successfully installed and tested and the system is as close to SHIPPING configuration as possible. Use this disk as the normal and customary end-user ERD.

9.2 Using the Emergency Repair Disk

The repair disk saves the following files:

Autoexec.nt	Copy of %systemroot%\System32\Autoexec.nt, used to initialize the MS-DOS environment.
Config.nt	Copy of %systemroot%\System32\Config.nt, used to initialize the MS-DOS environment.
Default._	Registry key HKEY_USERS\DEFAULT, compressed.
Ntuser.da_	Compressed version of %systemroot%\Profiles\Default user\Ntuser.dat. The repair process uses Ntuser.da_ if this one needs to be repaired.
Sam._	
Security._	Compressed Registry key HKEY_LOCAL_MACHINE\SECURITY
Software._	Compressed Registry key HKEY_LOCAL_MACHINE\SOFTWARE
System._	Compressed Registry key HKEY_LOCAL_MACHINE\SYSTEM
Setup.log	Log of which files were installed during a repair disk creation along with a cyclic redundancy check (CRC) information for use during the repair process.

The repair disk restores ONLY registry data in case of accidental user file deletion, operating system corruption or other configuration problems. It does not restore your applications or other vital files. If the system disk is reformatted and a new copy of NT is installed your applications will require re-installation.

To use the repair disk you must initiate a Windows NT Setup by booting the Setup Diskette #1 or booting the Windows NT Distribution CD-ROM. You will be given an option to perform a repair operation during this process.

9.3 Windows NT Boot Diskette

Should a problem arise with the system disk master boot record or from accidental deletion of the files in the root directory (C:\), it may be possible to access the disk to correct the problem without having to restore from the Windows NT distribution media. Creating a Windows NT boot diskette may permit access to the system disk in the event Windows NT will not start.

Note this is not a replacement for a proper backup of the disk.

Creating a Boot Diskette

Creating a boot diskette must be performed from a functional Windows NT system.

1. Insert a high-density diskette into Drive A.
2. Right-click on the diskette drive icon and choose **Format**.
3. Format the disk using Full Format.
4. Open the Windows NT Explorer and click on the root folder (usually C:\).
5. Check the **Options** setting under the *View* menu.
6. Select the button labeled **Show All Files**.
7. Select the file properties for each of the following files and clear the System and/or Hidden attribute. Then copy the files to the diskette

BOOT.INI

NTDETECT.COM

BOOTSECT.DOS (Only on systems with MS-DOS or Windows 9x dual start installations)

NTLDR

NTBOOTDD.SYS (Some SCSI boot drives only) (If this file is in the root folder, copy it to the diskette. If the file does not exist it is **not** required by the system)

Using the Boot Diskette

Make certain the startup sequence is set to boot from the diskette drive first. Refer to the BIOS configuration guidelines in this document for more information.

1. Insert the diskette into drive A (diskette drive).
2. Boot the system and allow the diskette drive to read.
3. If Windows NT does not start normally another method will be needed to restore the system.
4. If the problem is caused by root directory or MBR corruption Windows NT should start normally.
5. Check for missing files in the root directory or repair the master boot record.

9.4 Registry Backup

The Windows NT registry contains all of the internal configuration information about the operating system, applications, and hardware on the system. It is vital that backups of this information are available. To save all or parts of the registry use one of the following methods:

- Create a new backup of the registry any time a configuration change has occurred on the system. A configuration change is any installation of new hardware or applications.
- Use RDISK.EXE to create a current Emergency Repair Disk that saves the registry to diskette. Remember to use /S to save the full registry hives, else passwords and other vital information will not be saved to disk.
- The registry can be saved as part of normal backups. Some applications require the user to explicitly save the registry, as is the case with NTBACKUP.
- Use the Windows NT registry editor, Regedt32.exe, to save and restore registry keys.
- Use the Configuration Save option in the Windows NT Disk Administrator to save the SYSTEM registry hive.

9.5 Saving the Disk Configuration

Whenever changes are made to the disk configuration on a system, such as creating stripe sets, or changing drive letter assignments, the disk configuration should be saved to a diskette. This will permit a successful restoration of the disk configuration in case of a hardware failure or other problems.

Creating a Disk Configuration Diskette

1. Launch the Windows NT Disk Administrator.
2. From the **Partition** menu, select **Configuration**, then **Save**.
3. Insert a formatted high-density diskette in the diskette drive and click **OK**.
4. This will copy the disk configuration information to the diskette.
5. Label this diskette and keep in a safe place.

Restoring the Disk Configuration

1. Launch the Windows NT Disk Administrator.
2. From the **Partition** menu, select **Configuration**, then **Restore**.

3. Insert the saved disk configuration diskette and click **Yes**.
4. This will copy the disk configuration information into the registry.

9.6 Removing Stripe Sets

If you remove stripe sets from a system and do not inform Windows NT properly, the system will record event entries about the missing FT members after each system restart. To correct this situation you need to remove the stripe set entries from the system registry. There are two common methods for removing stripe sets.

Removing all Stripe Set Devices by deleting the DISK key

Important: This procedure will remove all stripe sets and drive letter information from the NT registry. This should only be done if you are certain you want to remove every drive from the system.

1. Invoke the Registry Editor (Regedt32.exe).
2. Locate and open **HKEY_LOCAL_MACHINE\SYSTEM** subtree.
3. Locate and select the DISK key.
4. Press "Delete" to remove the DISK key.
5. Choose "Close" to save the value.

Removing all Stripe Set Devices by deleting the partitions

1. Launch the Windows NT Disk Administrator from the Administrative Tools program group.
2. Select the stripe set partition you want to remove by single clicking the partition with the mouse.
3. Right mouse click and select "**Delete**".
4. Acknowledge the dialog box stating all data will be lost.
5. Choose "**Exit**" from the **Partition** menu to complete the changes.
5. Insert the saved disk configuration diskette and click **Yes**.

Remember to update your Emergency Repair Disk when all changes are complete.

10. Peripheral Configuration

This section describes disk storage configuration options, file systems, and general peripheral requirements.

10.1 Disk Configuration Guidelines

Enabling Write Cache

Most SCSI disk drives (including Avid drives) ship with write cache disabled. Enabling write cache on a drive is perhaps the most important configuration change you can make to improve disk performance. However, this does not occur when a drive is placed in service and requires a special utility.

Avid provides a utility called Avid Startup which automatically enables write caching on Avid drives after a system restart. For more information, refer to the product documentation.

Installing EZ-SCSI

Every Adaptec controller is shipped with a utility called SCSI Explorer on their EZ-SCSI tool-kit that allows a user to examine mode pages and specifically toggle drive cache settings. Systems using multiple high performance non-Avid storage devices may require a method of setting write cache so it is important an application like SCSI Explorer is installed on the system.

Important: For convenience and troubleshooting the EZ-SCSI tools **must be** installed on every system. This application is located on the IBM Ready to Configure CD-ROM and is named "SCSI Full Utilities".

IBM Ready to Configure CD-ROM versions less than 4.0 contain EZ-SCSI v4.0L. If you install this version on a system with Windows NT 4.0 and service pack 4, the EZ-SCSI installation process will warn you of possible incompatibilities with "NT 3.51 service pack 4". This is a nuisance dialog and may be ignored. IBM Ready to Configure CD-ROM versions 4.0 and higher contain EZ-SCSI v5.0 and install normally.

To enable or disable a write cache on a drive with SCSI Explorer:

1. Start SCSI Explorer and choose the Disk Cache tab.
2. Click a disk device icon on the SCSI device list.
3. Click the Write Cache tab, and select the Enable Write Cache button.
4. Click Apply to commit the change.
5. Repeat for remaining disks on the system.

General Storage Configuration:

The configuration of the SCSI host adapter should be verified to ensure the correct parameters are in effect for all disk drives on the system.

1. Leave SCSI disconnects enabled unless there is a specific device that does not support disconnects.
2. If possible keep non-media storage devices such as tape or removable drives on a separate controller channel.
3. If you intend to combine wide and narrow drives on the same chain, place the wide drives first. Use only wide to narrow conversion cables that have termination on the open pins.
4. Insure the adapter is configured to use the appropriate bus burst negotiation method for the all disks. Remember, Avid drives IS9 Pro and IS18 Pro require 20MB/s .
5. SCSI cabling and termination is often overlooked when configuring a system. Always use high quality cables for every drive connected to the system and secure them properly. Keep the cables as short as possible. Always use an active terminator on the last drive of a chain.
6. Low voltage differential drive (LVD) drives are less sensitive to chain length problems experienced with Ultra-Wide devices. If you configure a SCSI chain using LVD drives exclusively, you should set the Adaptec 7895 or 3940AUW Synchronous Transfer Rate to 40MB/s for each SCSI ID. This will insure maximum performance from these drives.

10.2 Supported File Systems

Since the file system is an integral part of the operating system and not the application, Avid NT applications are supported with either the NTFS or the FAT file systems.

NTFS

NTFS is the NT native file system, offering robust security features, compression, and better block management than FAT. It allows partition sizes up to 2 terabytes depending on block size and disk drive configurations and is the most appropriate choice for RAID configurations.

Avid recommends using the default allocation unit size for all partitions.

For standard editing configurations Avid Systems Engineering suggests the NTFS file system over FAT for all volumes intended as media disks.

FAT16

The FAT file system is needed only if compatibility is required with 16-bit operating systems such as MS-DOS, Windows 9x, or Windows 3.x. The FAT file system implemented in Windows NT permits partitions and extended partitions larger than 2GB, to a maximum of 4GB. For backward compatibility with 16-bit operating systems confine the partition size to no more than 2GB.

FAT32

Windows NT 4.0 through service pack 4 does not support the FAT32 file system supported with Windows 95 OSR2 or Windows 98.

10.3 Disk Striping

Disk striping (RAID 0) allows data transfers to split over multiple drives simultaneously. With striping the overall performance of an I/O system is greatly enhanced and is a must for increased image quality or real time support.

Advantages of Disk Striping

- Better read and write performance.
- Striping is cumulative. Unlike disk mirroring (RAID1), you sum the total partition size of each drive.
- Striped drives may be any size, and you may mix any combination of drives.
- When striping across multiple controllers or channels you may have an uneven amount of drives on each controller.
- Drive combinations may consist of narrow and wide variations although this will negatively impact overall disk performance.
- Striping requires no special third party drivers as operating code is built into Windows NT. Simply create the stripe set through the Windows NT **Disk Administrator** once, format the drives, and each time you boot NT the stripe driver (FTDISK.SYS) is loaded. For more information refer to the Windows NT documentation of the Disk Administrator online help.

Disadvantages

- If one member of a stripe set becomes defective, the entire stripe set is lost.
- Stripe sets are not easily moved to other systems. This is a consideration for users planning to share drives between systems. Avid has provided a utility (DiskMounter) which may assist stripe set movement between systems. For more information, see the **Utilities** section of this document.

Creating a Stripe Set

1. Launch the Windows NT Disk Administrator from the Administrative Tools program group.
2. Press and hold the Ctrl key and single click an area of free disk space on each disk drive you want to be a member of a stripe set. Up to 32 drives can be selected.

3. Right mouse click and choose "Create Stripe Set". A dialog box will be displayed that allows you to choose the size of the stripe set.
4. Enter the targeted size of the stripe set and then click OK.
5. Choose "Commit Changes Now" and reboot the system if you do not have existing stripe sets.
6. Once the system has restarted you will need to launch the Disk Administrator again and format the newly created stripe set.

Important: Whenever a stripe set is created you should save your disk configuration to a diskette. This provides a method of recovery in the event of a hardware or software failure. Refer to the **NT Maintenance and Recovery** section of this document.

10.4 Partitioning Disk Drives

Partitioning disk drives is a method of disk organization only and has no functional performance value. Avid NT applications **do not require** specific partition sizes. Avid Systems Engineering recommends partition sizes and planning are left to the customer according to the customer workflow. For detailed information about partitioning, consult the Windows NT documentation or Disk Administrator on-line help.

Partition Guidelines

- NT allows up to 4 primary partitions per drive. Each partition is assigned a drive letter and can not be further subdivided.
- NT allows 1 extended partition per drive. An extended partition may be subdivided into any number of logical drives, each with it's own drive letter.
- NT allows unformatted space on multiple drives to be configured as a volume set, again assigned only one drive letter.
- In general, FAT file systems should be limited to a 2GB-partition size to maintain backward compatibility.
- The NTFS file system is recommended for any partition greater than 2GB.
- Drives employing NTFS may be partitioned any size.

10.5 Formatting Disk Drives

Every disk drive on the system must be formatted before it can be placed in service. There are three types of disk formatting available:

- Low-level Format
- Full Format
- Quick Format

Important: All format operations destroy data on the disk.

Low-Level Format

Low-level formatting writes error correction and sector identification information for each sector onto the disk. It also configures the disk drive geometry based on the host adapter parameters and is necessary whenever a drive has been formatted using a different brand controller. Avid drives in particular may need to be low-level formatted if they were previously in service on a Macintosh computer.

Low-level formatting is performed through the SCSI host adapter. Follow the procedure described here for low level formatting using an Adaptec controller:

1. Power up the system.
2. Enter the Adaptec option ROM by holding the **Ctrl** plus the **A** key immediately after the Adaptec SCSI Host Adapter message appears on the monitor.
3. The Adaptec option ROM screens are not mouse driven and must be navigated using the arrow keys.
4. Two channels 0A, and 0B will be displayed on the upper right hand section of the display, Choose the channel supporting the disk drive(s) needing formatting.
5. Choose SCSI Disk Utilities and select Perform Low Level Format.

Important: Never interrupt a low-level format. Always allow the process to complete.

6. When formatting operations are complete press **Esc** and choose **Yes** to return to the main screen.
7. Press **Esc** and choose **Yes** to save the changes, then restart the system.

Important: Low-level format is not a replacement for the operating system disk format

Full Format

After partition information has been determined, the drive must be formatted. Full formatting is accomplished through the Windows NT Disk Administrator and configures a disk volume for the type of file system chosen. Formatting also scans the partition for bad sectors.

A format operation may be interrupted, but if the volume was previously formatted, the data is lost.

Quick Format

Quick format simply initializes the volume with the appropriate file system and performs no bad sector scanning. Use this option only if the volume was previously formatted under Windows NT.

10.6 Non Avid Storage

Some configurations may require non-Avid storage devices from IBM, Seagate, or others. Avid provides video resolution performance guarantees only on Avid storage combinations specifically tested in-house. Avid does not provide the same performance assurances when non-Avid storage devices are employed. However, the use of such devices is not specifically prohibited. Avid Systems Engineering recognizes this and suggests the following guidelines when non-Avid storage devices are used for media drives.

- Disable **Drive Filtering** if the Avid NT application implements it. On Avid Symphony and Xpress NT this is accomplished by opening the General Settings list and clearing the Drive Filtering check box.
- Enable write caching on all disk drives.
- Disable recovered error reporting by the disk drive if possible.
- Use only high quality cables and active termination.
- Follow the SCSI specification for cable length, keeping the overall length within published guidelines.
- Avoid mixing drives with different bus speeds.

For configurations requiring backup devices such as DLT, DAT, or 8mm helical scan, Avid Systems Engineering suggests these devices are configured to a SCSI bus separate from the primary media drives SCSI chain. This will lessen the interconnection problems common with narrow and wide SCSI bus devices, prevent termination mismatches, and make it easier to troubleshoot.

Avid does not provide support for Iomega Jaz, Zip or other removable devices used as media storage devices.

10.7 Network Drives

Avid does not support digitize or playback operations to or from a Windows NT server or workgroup media sharing environment. However, media may be archived to networked volumes.

10.8 Removable Drives

Avid does not provide support for Iomega Jaz, Zip or similar removable devices used as media storage devices. These devices can however be employed as media archival devices. Parallel port or IDE based Jaz drives are best avoided as they may conflict with system devices.

Avid does support MediaDock configurations for use as media drives.

For configurations requiring backup devices such as DLT, DAT, or 8mm helical scan, Avid Systems Engineering suggests these devices are configured to a SCSI bus separate from the primary media drives SCSI chain. This will lessen the interconnection problems common with narrow and wide SCSI bus devices, prevent termination mismatches, and make it easier to troubleshoot.

10.9 Disk Fragmentation

As data is written, deleted, and re-written to a disk drive, the drive is writing the data in the form of blocks as defined by the file system allocation size. File systems keep track of the location and number of blocks used by a particular file. When files are written to a disk the file system attempts to write the blocks contiguously on the platters. If there is not enough contiguous space on the disk to accommodate the file, the file system breaks up the file into pieces, writing as many contiguous blocks as it can in one spot then jumping to another location on the disk to complete the write. Whenever this occurs the file system has to keep reference pointers to all the pieces of the file. These pointers are sometimes called retrieval pointers and the file is considered fragmented.

As more data is added and deleted from the disk, less contiguous space becomes available and the files become more fragmented. This fragmentation increases the amount of overhead the file system and drive must perform to locate and retrieve the data whenever a read or write operation is required. As a disk becomes severely fragmented, performance becomes impacted.

You cannot avoid fragmentation on a disk. The trick is to minimize the impact it will have on your system. Unfortunately there isn't a reliable number to reference for too much fragmentation. For example, a system with thousands of small files may perform acceptably with 70% fragmentation, but this would be intolerable for a video application with media files averaging in the hundred of thousands of blocks.

Commercial defragmentation utilities such as *Executive Software's Diskeeper* or *Raxco Software's PerfectDisk NT* are available for both FAT and NTFS file systems. These utilities can lessen the amount of fragmentation on disk but do not completely eliminate it. The only way to completely defragment a disk drive is to perform a full backup followed by a restore. This reconstructs the file system bitmap and places the files in a contiguous layout, eliminating all fragmentation.

Important: If a commercial defragmentation utility is to be used by the customer, it must be disabled while using Avid applications.

10.10 Resolution Matrix

The following charts represent Avid tested configurations designed to support targeted application resolutions.

SCSI Matrix

			Single Field		Two Fields	
			One Stream	Two Stream	One Stream	Two Stream
# of Drives	Stripe Config	# of SCSI Channels	Resolutions Supported	Resolutions Supported	Resolutions Supported	Resolutions Supported
1 x IS9 Pro or 1 x IS18 Pro	Non Stripe	1	15:1s 4:1s 2:1s	15:1s 4:1s 2:1s	20:1 3:1	20:1
2 x IS9 Pro or 2 x IS18 Pro	2 Way Stripe	1	15:1s 4:1s 2:1s	15:1s 4:1s 2:1s	20:1 3:1 2:1	20:1
2 x IS9 Pro or 2 x IS18 Pro	2 Way Stripe	2	15:1s 4:1s 2:1s	15:1s 4:1s 2:1s	20:1 3:1 2:1	20:1 3:1
4 x IS9 Pro or 4 x IS18 Pro	4 Way	2	15:1s 4:1s 2:1s	15:1s 4:1s 2:1s	20:1 3:1 2:1	20:1 3:1 2:1

Fibre Channel Matrix

		Single Field		Two Fields	
		One Stream	Two Stream	One Stream	Two Stream
# of Drives	Stripe Config	Resolutions Supported	Resolutions Supported	Resolutions Supported	Resolutions Supported
10 x FC 7200 RPM	10 Way Stripe	15:1s 4:1s 2:1s	15:1s 4:1s 2:1s	20:1 3:1 2:1	20:1 3:1 2:1

		Single Field		Two Fields	
		One Stream	Two Stream	One Stream	Two Stream
# of Drives	Stripe Config	Resolutions Supported	Resolutions Supported	Resolutions Supported	Resolutions Supported
10 x FC 7200RPM	10 Way Stripe				1:1

		Single Field		Two Fields	
		One Stream	Two Stream	One Stream	Two Stream
# of Drives	Stripe Config	Resolutions Supported	Resolutions Supported	Resolutions Supported	Resolutions Supported
6 x FC 10K RPM	6 Way Stripe				1:1

10.11 Keyboard and Mouse Extensions

Keyboard/Mouse/VGA extension kits fall into three categories:

Console and Expanders Switchers - buffered, active switchers used to control multiple systems from a central location. Cable lengths using UTP Cat 5 wire to 700 feet are possible with some of these solutions.

Major Vendors: Rose Electronics, Raritan, Cybex Computer Products
Price Range: \$300+

Switch Boxes – un-buffered, passive units designed to switch between two systems. Design accommodates 6 to 20 foot extension cables including monitor cables. Sometimes these boxes require the display resolution dropped to 800 x 600 for best results.

Major Vendors: Dalco Electronics, BlackBox Corp.
Price Range: \$30+

Passive cable extensions - Most cable-only solutions vendors limit their product lines to 6, 12, or 25-foot extensions. Extensions longer than 25 feet require a booster since long extensions are prone to signal degradation. Use of these cables can negatively impact the performance and reliability of the monitor and mouse. Prices range to about \$20 per cable.

There is no published specification for maximum peripheral cable length. With the average PC mouse/keyboard length at 6 to 10' and VGA 6 feet what's the best solution to extend these peripherals? For deskside systems, a 6' extension should be more than adequate, with minimal signal degradation. For rack-mountable systems, use no more than 12' before adding a line booster. Beyond that you start getting into buffer overflow problems, systems that fail to recognize one or more of the peripherals and screen refresh rates or resolutions that must be dropped below the minimum spec of 1024 x 768 75Hz.

11. Diagnostics and Utilities

Diagnostic and utility applications are considered optional in nature if they are not required for successful operation of Avid applications. The end-user should assess the impact to their individual workflow requirements before installing or using any software.

11.1 Vendor Utilities and Diagnostics

IBM Enhanced Diagnostics CD-ROM

This CD-ROM contains functional tests for the various graphics adapters available with the IBM M-Pro systems. These tests are native to MS-DOS only, and an installation batch file is profile to create the necessary testing diskettes.

IBM Ready-To-Configure Utility Program CD-ROM

This CD-ROM contains device drivers, diskette creation procedures, utilities, and selected documentation for the system. Navigation is internationalized through a menu driven interface. The following is a list of Windows NT Applications and Device Drivers supplied on the CD.

Applications:

- Adaptec SCSI Full Utilities
- ConfigSafe
- CoSession Remote 32
- IBM AntiVirus
- IBM ClientCare Setup
- IBM IDE Hard Disk Monitor
- IBM NetFinity
- IBM Product Registration
- IBM Utilities
- Install Online Books
- LANDesk(R) Client Manager 3.0
- Multiprocessor Upgrade for Windows NT
- PC-Doctor for Windows NT
- Tivoli Lightweight Client Framework
- VoiceType Simply Speaking GOLD

Device Drivers:

- Adaptec 7800 Family Manager Set
- Bus Mastering IDE/SMART
- Crystal Audio
- GLyder MAX-2 2D/3D Graphics Accelerator
- Intel(R) Ethernet Driver

- Intergraph 3D Graphics for Windows NT 3.51
- Intergraph 3D Graphics for Windows NT 4.0
- Number Nine 9FX Reality 334 Video for Windows NT 3.51
- Number Nine 9FX Reality 334 Video for Windows NT 4.0

11.2 Avid Diagnostics

Avid System Test Pro

Avid System Test Pro is a diagnostic program designed to test the Avid specific components of the system. Avid System Test Pro requires that all relevant Avid supplied device drivers are loaded and started before tests can be run. Refer to the on-line help file in the Avid\Utilities directory for more information.

StorEX

Avid StorEx is a general-purpose hard-drive exerciser program. It verifies the operation of hard drives connected to a SCSI host adapter or Fibre Channel adapter and may be useful when troubleshooting storage problems. For more information refer to the NewCutter product documentation.

Avid Video I/O

The Avid Video I/O Utility program allows field updates of the firmware inside the Avid Meridien I/O box without returning the unit to Avid. This utility should be used only when advised by Avid Customer Support. The updated firmware code is bundled in the utility and Customer Support will provide access to updated files if the need arises.

Avid does not recommend automatically updating your firmware if you are not experiencing problems. It is possible that the new firmware might perform task differently than the previous revision. Refer to the on-line help file in the Avid\Utilities directory for more information.

11.3 Avid Utilities

Avid Startup

Avid Startup is a Windows NT service that executes automatically at system startup. The service enables write caching on Avid storage devices and will update firmware on the devices if necessary.

Avid Startup does not need to execute each time the system is started if the drive configuration has not changed. If your system has many drives configured this utility can take considerable time to complete its task. If you need to disable the startup utility:

1. Open the **Services** control panel.

2. Single click to select the **Avid Startup** service.
3. Click the **Startup** button.
4. Under the **StartupType** section set the radio button marked **Disabled**.
5. Click OK.
6. Click **Close** to exit the control panel.
7. Changes will be effective after the next system reboot.

Note: If you disable Avid Startup, always re-enable the service any time you change your drive configuration or rev the application.

Disk Mounter

Avid Disk Mounter is a utility that permits moving stripe sets between Windows NT systems. The utility must reside on the source and target system and must be executed on both systems to allow stripe set movement.

Disk Mounter is limited to Avid storage devices and simple stripe set configurations only. It does not support drives configured with extended partitions. For more information on Disk Mounter refer to the on-line Disk Mounter help file in the Avid\Utilities directory.

11.4 Third Party Utilities

Avid Systems Engineering maintains a list of utilities and applications that have been tested on Windows NT systems. The evaluations are done to insure the applications do not interfere with the operation of Avid applications or the Windows NT operating system environment. Avid Systems Engineering makes no claims of total compatibility or interoperability.

The list will be available through Avid Customer Support channels.

12. Troubleshooting

This section describes common integration related difficulties with the IBM 6889 platform.

12.1 Media Board Driver Failure

If the media board device driver fails to start properly the Avid Symphony and Xpress applications will not function. Check for the following common causes of this problem:

- Insure the driver is registered as a SYSTEM startup device in the Devices Control Panel.
- Examine the System Event Log for the entries similar to these:

8/20/98 2:11:59 PM APMPhxNTDriver Error None 2 N/A IBM1
APMPhxNTDriver Driver Entry Message: Driver Entry Error = Failed to call to
PhoenixProbePCIBus

8/20/98 2:11:59 PM APMPhxNTDriver Error None 2 N/A IBM1
APMPhxNTDriver Driver Entry Message: Driver Entry Error = Failed call to
HalAssignSlotResources

There are two common reasons for these entries:

1. Your system has service packs 1, 2, or 3 installed and the wrong HAL is installed on the system. Service Pack 4 does not require the HAL replacement procedure to allow the Meridien Digital Media board driver to function. Service Pack 4 does however require a HAL replacement for MIDI operation using the Crystal Audio C4235 audio chip. Refer to the HAL replacement procedure in this document.
2. The cables between the 3D effects board and the media board are improperly seated or defective. Try removing the 3D effect board as a test.

12.2 Display Monitor Colors or Resolution Incorrect

Symptom:

Text and graphics appear in 640 x 480 resolution with 16 colors only.

Solution:

Windows NT has booted in basevideo mode, either by user selection, or because no display driver is loaded. This is common when the Number Nine display driver has not been loaded and started. Refer to the **Windows NT Device Drivers** section of this document.

12.3 Second Display Monitor Not Enabled

If after booting Windows NT only the primary display monitor is enabled check the following areas:

- Insure the second monitor has power applied.
- Insure the cabling between the monitor and the display controller is secure and there are no bent pins. Try swapping cables between the primary and secondary monitors to see if the problem follows the cable.
- Open the Avid EDC Control Panel and insure the **Multi** button is checked.
- If the **Multi** button is grayed out, open the **Event Viewer** in the **Administrative Tools** program group. Look for any **revolution3d** entries in the **System** event log. If there are revolution3d entries compare them to the following examples:

```
revolution3d      Error   None   39      N/A     A
```

The device could not allocate one or more required resources due to conflicts with other devices The device memory setting of 'F6800000' could not be satisfied due to a conflict with Driver 'revolution3d\Device\Video0'.

```
revolution3d      Error   None   39      N/A     A
```

The device could not allocate one or more required resources due to conflicts with other devices The device memory setting of 'F7000000' could not be satisfied due to a conflict with Driver 'revolution3d\Device\Video0'.

```
revolution3d      Error   None   39      N/A     A
```

The device could not allocate one or more required resources due to conflicts with other devices The device memory setting of 'F7800000' could not be satisfied due to a conflict with Driver 'revolution3d\Device\Video0'.

If there are entries that look similar to these examples, examine the slot configuration of the boards in the system. Make certain the display controller is in the proper slot.

12.4 Edit DMA Ext Clock Error

If the media board device driver does not load properly the Edit DMA device driver may report the following error in the System Event Log.

```
8/20/98 2:01:47 PM  APMEditDMA  Error   None   4       N/A     IBM1 APMEditDMA
not loaded, ext clock error
```

This error can also occur if the cable between the display controller board and the media board is not properly seated.

12.5 MIDI Resource Failure

The current implementation of MIDI support on the IBM 6889 requires that the **MPU-401** compatible driver be installed at IRQ 9. The **MPU-401** driver will not function at any other IRQ. Also, because the audio chip on the system board is an ISA device, the interrupt resource is not shareable with other devices in the system. If MIDI installation is attempted after other hardware has been installed or after a board swap or upgrade, the IRQ 9 resource may be lost and the drivers will not load properly.

1. Launch **Windows NT Diagnostics** from the **Administrative Tools** program group and select the resource tab.
2. Inspect the resource map and look for any device already using IRQ 9.
3. If a device has claimed IRQ 9 you will need **to remove the complete board set and install the AGP graphics card**. Removing just the board that has claimed the IRQ 9 resource or locking the availability of the resource in the BIOS will not be sufficient since the system may assign the resource to another device.
4. Open the **Multimedia** Control Panel and select the **Devices** tab.
5. Click the "+" box to the left of MIDI Devices and Instruments to expand the display.
6. Select the Add button at the bottom of the window.
7. Scroll down the list, select the MPU-401 Compatible Driver and click OK.
8. A dialog box will appear asking for the location of the driver. Type in the path where the driver is located. This can be the C:\I386 directory or from the SP3 distribution disk.
9. On occasion a dialog may come up informing that the driver is on the system and allows selection of either **Current** or **New**. Always select **New**.
10. Once the driver attempts to load another dialog will appear asking you to select an IRQ and base address. When this is shown select IRQ 2/9 and a Base I/O of 330. The base address can be something else but this should work. Do not use any other IRQ setting as MIDI will only function at IRQ 9!
11. After this driver is installed, the system will prompt you to restart, select **"Don't Restart Now"**
12. Repeat step 6 but when the list appears again select the **Low Level Wave, MIDI and AUX Support** driver.
13. Again you will be prompted for a location and possible dialog of Current / New. Select **New**.
14. Once the driver is installed you will be asked to restart. At this time restart the machine.
15. After the system restarts, log on to NT and launch **Windows NT Diagnostics** again.

16. Open the resource tab and insure that the MPU-401 driver is at IRQ 9. If this is the case you can shut down the machine and reinstall the boards removed in step 3. The IRQ resource should be locked down at this point.

12.6 Application Key (Dongle) Does Not Function

Symptom:

Symphony or Xpress fail to detect the dongle attached to the system.

Solution:

The best way to troubleshoot an application key failure is from the top down. Since the application key has a few dependency services, a failure in any one of these services will render the application key inoperable.

The application key requires a service called **Sentinel for I386 Systems**:

1. Open the **Multimedia Control Panel**, then open the **Devices** tab.
2. Open the **Other Multimedia Devices** and look for the **Sentinel for I386 Systems** service.
3. Click on the **Settings** button. You should see information similar to the following:


Parallel Ports

Physical Address	Port Type	Bus #	Bus Type	Addr Space	DOS Addr	Use?	Created By
378	IBM AT	0	ISA	I/O	----	Yes	System

6. If the information does not appear correctly, open the **Devices Control Panel**.
7. Scroll down the list of devices for the **Parport** and **Parallel** devices. Both should have a Status equal to **Started** and a Startup value of **Automatic**.
8. Try starting both devices if not started. If this fails, the parallel port setting in the system BIOS is the likely cause of the problem.
9. Shut down the system and enter the system BIOS by pressing F2.
10. Look at the submenu **Devices and IO Ports/ Parallel Port Setup**.
11. Change parallel port parameters to reflect recommendations listed in the **BIOS Configuration** section of this document.
12. Restart the system and re-check the Sentinel service.

13. Reference Section

13.1 IBM Intellistation M-Pro Parts View

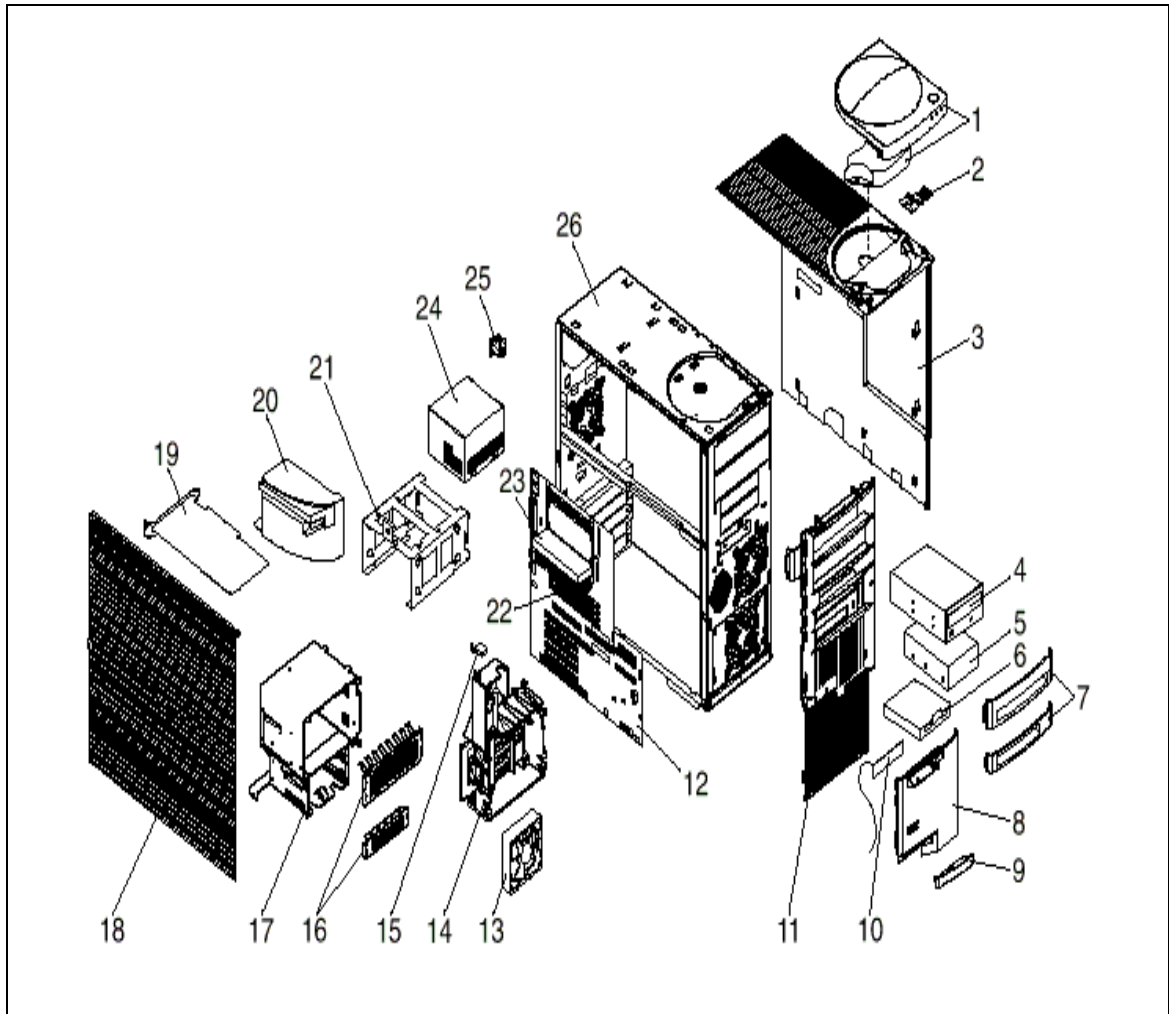

Item	System (Type 6889)	IBM FRU	Item	System (Type 6889)	IBM FRU
1	Handle/Cap Assembly	12J5547	21	3.5-In. Hard Disk Bracket	12J4516
2	Power switch/LED Cable Assembly	12J4510	22	64 MB ECC DIMM Memory 128 MB ECC DIMM Memory	01K4353 01K4354
3	Top/Side Cover Assembly	01K1637	23	350 MHz Pentium II microprocessor 400 MHz Pentium II microprocessor Terminator Card, Processor Processor Retainer Support Bracket Assembly	01K4333 01K4334 01K7349 02K2903
4	CD-ROM Drive 32X Max	02K1119	24	Power Supply 330 W.	01K9866
5	6.4 GB IDE Hard Disk Drive, 7200 RPM 9.1 GB IDE Hard Disk Drive, 7200 RPM 9.1 GB SCSI Hard Disk Drive, 7200 RPM	10L6078 10L6079 10L6085	25	Keylock Assembly	12J5102
6	3.5-In. 1.44 MB Diskette Drive 3.5-In. 1.44 MB Diskette Drive - Japan	75H9550 75H9552	26	Chassis Assembly	12J4515
7	Blank Louver Bezels (3.5-In. and 5.25-In.) Miscellaneous Optional Bezels	01K1888 12J5551		Cable - Audio CD-ROM	75H9219
8	3.5-In. Bezel Assembly	12J5549		Cable - CD-ROM IDE	01K1483
9	Model Plate	12J5552		Cable - Diskette Drive	01K1541
10	RFID Antenna	03K9769		Cable - Hard Disk IDE	01K1553
11	Front Bezel	12J5548		Cable - Intergraph	01K2035
12	System Board-without processor or memory	93H9345		Cable - SCSI 2 Drop	01K1485
13	Fan Assembly 92 mm	02K2861		Cable - SCSI 4 Drop	01K1481
14	Card Guide	10L5607		Foot (Qty 4)	12J4506
15	C2 Switch Assembly	01K1495	opt	Microphone	01K4910
16	EMC Kit	12J4508		Miscellaneous Hardware Kit	12J4503
17	3.5/5.25-In. Hard Disk Bracket	12J4501		Miscellaneous Screw Kit	93F0041
18	Access Cover Assembly	12J5546		Speaker	06H9417
19	Video Adapter - Matrox Millenium Video Adapter - 3D PRO 3400/GA Video Adapter - 3D PRO 3400/T	01K4340 01K4337 01K4336		System Board EMC Shield	01K1855
20	Air Baffle	02K2864			

13.2 Environmental Specifications

Feature	Description
Depth	445 mm (17.5 inches)
Height	492 mm (19.4 inches)
Width	200 mm (7.9 inches)
Weight	17.3 kg (38 pounds)
Air Temperature	System on: 10° to 35°C (50° to 95°F) System off: 10° to 43°C (50° to 110°F)
Humidity	System on: 8% to 80% System off: 8% to 80%
Maximum altitude	2134 m (7000 ft)
Heat Output	Maximum (as shipped): 306 BTU (90 watts)
Low range input voltage	Sine-wave input (50 to 60 Hz) required. Minimum: 90 V AC Maximum: 137 V AC
High range input voltage	Sine-wave input (50 to 60 Hz) required Minimum: 180 V ac Maximum: 265 V ac
Input kVA (approximately)	Maximum (as shipped): 0.70 kVA
Airflow	Approximately 0.92 cubic meters/minute (32.5 CFM)
Average sound pressure levels	At operator position: 42 dB operating 37 dB idle At bystander position (1 meter): 36 dB operating 34 dB idle
Declared (upper limit) sound power levels	5.2 bels operating 5.0 bels idle

- Maximum configuration weight depends on options installed.
- Figures above are a system fully populated with options.
- Maximum power and heat specifications are based on the maximum capacity of the system power supply.
- For additional information, see the ISO Supplier's Declaration available from IBM.

13.3 Packaging

